


# 30CM BOX FAN

With Timer

G30BFW15

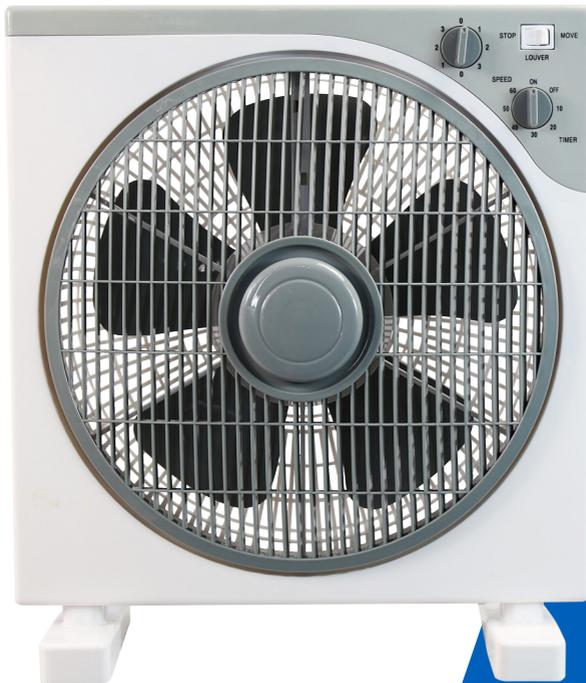

Instruction Manual

12  
MONTH

MANUFACTURER'S  
WARRANTY

**GVA**

THE 'V' STANDS  
FOR VALUE.


# Contents

---

Guide to the Appliance	2
Caring for the Environment	3
Safety Information and Warnings	4
Operation Instructions	6
Care and Maintenance	8
Technical Specifications	9

# Guide to the Appliance

---

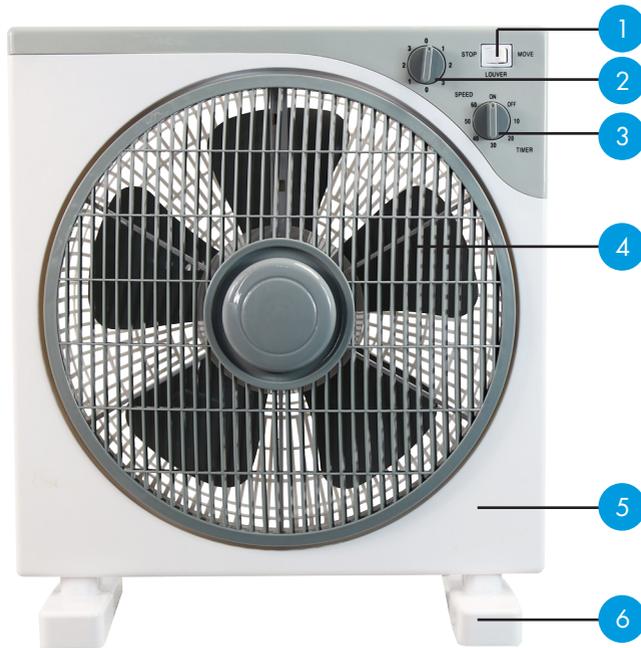

1. Louvre switch
2. Speed control
3. 60min Timer
4. Mesh grille
5. Box fan body
6. Standing feet

NOTE: Due to production improvements, the appliance may differ slightly from the diagram shown. Diagrams in this instruction manual are for reference only.

# Caring for the Environment

---

## Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

## Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again. Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous on the environment and human health.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling.

The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse.

# Safety Information and Warnings

---

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. If applicable, pass these instructions on to the next owner of the appliance.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

## Electrical safety and cord handling

- Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label.
- To protect against fire and electric shock, do not immerse the cord, plug or the appliance itself in water or other liquid, or expose the electrical connections to water.
- To reduce the risk of electrocution, never operate this product with wet hands or spill liquids into the product.
- The power supply cord should be run in such a way that there will be no risk of anyone pulling it inadvertently or tripping over it.
- Do not kink, bend, squash, strain or damage the power cord and protect it from sharp edges and heat.
- Do not pick up or operate the appliance if the power supply cord, plug or housing is damaged, or after it malfunctions or has been damaged in any manner. In such a case, unplug the appliance and contact the after sales support line for advice on repair or replacement.
- A damaged cord or plug must be replaced by the manufacturer or a qualified person in order to avoid a hazard. Contact the after sales support line.
- Unplug the appliance from the power outlet when it is not in use and before cleaning, servicing, moving or storing the appliance.
- To disconnect, turn all controls to the off position and unplug the cord from the wall outlet. When unplugging, grip the plug, do not pull the cord.

## Usage conditions and restrictions

- This appliance is intended for indoor household use only. It is not suitable for commercial or industrial use.
- Do not use the fan outdoors.

# Safety Information and Warnings

---


- Do not use the fan for anything other than its intended purpose, and only use it as described in this manual.
- We accept no liability for any damage due to improper use or incorrect handling.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Young children should be supervised to ensure they do not play with the appliance. Close supervision is necessary when any appliance is used by or near children.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock and/or personal injury.
- Place the fan on a flat surface when operating to avoid overturning.
- Do not operate the fan in a damp place or in areas high in humidity (such as the bathroom).
- Improper installation may result in the risk of fire, electric shock and/or injury to persons.
- **WARNING!** When the fan is in operation, do not put fingers or any object in the rotating safety grille as this may cause injury and/or damage to the appliance.
- The unit has no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the appliance yourself.

# Operation Instructions

## Rotating grille

The rotating grille at the front of the box fan maximises the cooling efficiency and moves air around the room. Press the louvre rotation switch on the front panel to the MOVE position for the grille to start rotating.

When you want the airflow in one direction only, wait until the fan is blowing in the desired direction before stopping the grille movement.

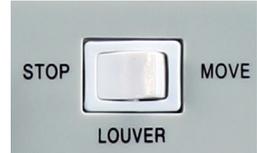

## Three-speed operation

The box fan is designed to work in three different speed modes, ranging from a gentle breeze (1) to full speed (3).

To start/stop the fan and select a rotating speed, you can turn the speed control (pictured right) clockwise or counterclockwise:

- Speed 0 - Stop/Off
- Speed 1 - Low Speed
- Speed 2 - Medium Speed
- Speed 3 - High Speed

NOTE: When the timer is set to "OFF", the fan will not operate.  
To use the fan without the timer, you must turn the timer knob to "ON" before adjusting the rotating speed.




## Timer

The fan has a timer you can use to set the amount of time (up to 60 minutes) after which the fan switches off automatically. To operate the timer, turn the timer knob clockwise to the desired position.

After the set time, when the timer reaches the "OFF" position, the fan switches off. To operate the fan again at this stage, reset the timer to the desired length of time you want it to run for, or use the fan without the timer (see the note below).

NOTE: To use the fan without the timer, turn the timer knob to "ON", then turn the speed control to select the desired fan speed and finally select MOVE or STOP for the rotating grille.

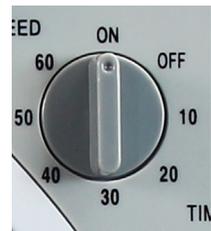

# Operation Instructions

---

## Safety shut-off

The fan is designed to switch itself off when it is not in the correct operating position. This is a built-in safety feature that ensures the appliance can only be switched on in the upright position.

# Care and Maintenance

---

## Care and cleaning

- Before cleaning the fan, make sure it is switched off and unplugged from the power supply. Do not attempt to take the unit apart. It is not designed to be dismantled without special tools.
- Switch the louvre to STOP position. Turn the speed control to the 0 position and unplug the Box Fan from the power outlet.
- Use only a soft, damp cloth to gently wipe the Fan and dry well.
- Do not immerse the Fan in water and never allow water to enter the motor housing.
- Do not use harsh chemicals to clean the fan.
- Do not use this appliance with a programmer, separate remote control system or any other device that switches the appliance on automatically.
- When you have finished using the fan at the end of the season, wipe off any dust to maintain it in good working order for the next season. Clean and store the fan in its original box in a safe, dry location, protected from dust.
- The appliance requires little maintenance and contains no user-serviceable parts inside. Do not attempt to take it apart, repair or modify it. Do not operate the fan if its power cord or plug is damaged, or when it is working abnormally. In case of damage or malfunction, or if the cord is damaged, have the unit repaired by trained personnel only, or contact the after sales support line for advice on repair or replacement.

## Proof of purchase

To receive warranty retain receipt as proof of purchase.

# Technical Specifications

---

## Specifications:

Model: G30BFW15

Supply: 220-240VAC 50Hz

Wattage: 35W

Made in China

Subject to technical change without notice.





**THE 'V' STANDS  
FOR VALUE.**

M.E.W. (Australia) Pty Ltd  
15 Vaughan St  
Essendon Fields VIC 3041  
ACN 152 719 036

1300 725 885  
customer@gvaproducts.com.au  
gvaproducts.com.au

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.