

30CM RETRO DESK FAN

G30DFS15



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY



GVA

THE 'V' STANDS
FOR VALUE.

Contents

Guide to the Appliance	2
Caring for the Environment	3
Safety Information and Warnings	4
Items in the Box	6
Operation Instructions	7
Troubleshooting	8
Care and Maintenance	9
Technical Specifications	10

Guide to the Appliance

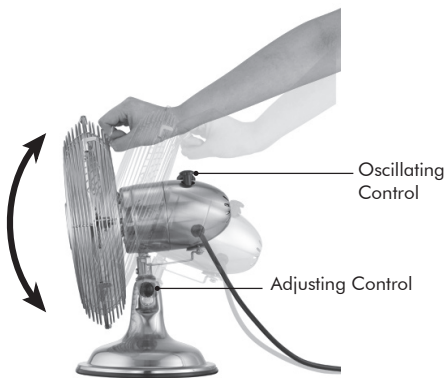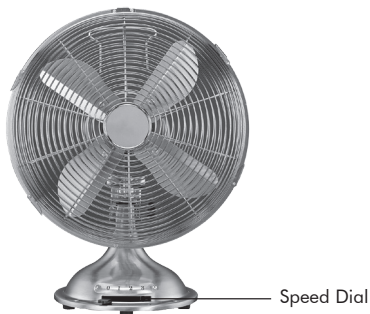

Due to production improvements, the appliance may differ slightly from the diagram shown. Diagrams in this instruction manual are for reference only.

Caring for the Environment

Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again.

Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous on the environment and human health.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately. Contact your local authorities for advice on recycling facilities in your area.

The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse.

Safety Information and Warnings

Please follow all the safety precautions listed below for safety and to reduce the risk of injury or electrical shock.

- Read all the instructions before operating the appliance and keep them for future reference. If you pass the product on to a third party, include these instructions.
- Your fan should be used in such a way that it is protected from moisture, e.g. condensation, splashed water, etc. Do not place or store your fan where it can fall or be pulled into water or any other liquid.
- Stand the fan on a stable, level surface during use. Do not allow your fan to sit on top of the mains cable.
- Do not remove any fixed covers. Never use this appliance if it is not working properly, or if it has been dropped or damaged. Always contact a qualified technician to carry out repairs. If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- If the fan is knocked over during use, turn off the unit and unplug it from the mains socket immediately.
- Do not operate your fan in the bathroom.
- Do not use hazardous chemicals to clean or come into contact with the fan. Never attempt to use the fan without the base parts assembled or in a horizontal position.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- Never allow children to point their fingers into any power sockets or moving parts.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

- Ensure that the fan is switched off and fully unplugged from the mains supply before removing the guard.
- Do not operate this appliance with anything other than your hands. Do not use the appliance with wet hands.
- For fans that require assembling, to avoid personal injury, please ensure the product has been fully assembled according to the instructions within this manual.

 
Items in the Box

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:



Main Unit



Instruction Manual

Operation Instructions

- Slide the SPEED DIAL for the required fan speed. The following settings are available:
 - 0 - The Fan is switched Off
 - 1 - The Fan operates at the lowest speed
 - 2 - The Fan operates at the medium speed
 - 3 - The Fan operates at the highest speed
- To make the fan head oscillate, push the OSCILLATING CONTROL down. To stop the oscillation, pull the OSCILLATING CONTROL up.
- The head of the fan can be adjusted up or down. To do this:
 1. Loosen the ADJUSTING CONTROL.
 2. Adjust the fan to the desired angle.
 3. Tighten the ADJUSTING CONTROL.

Troubleshooting

Problem	Solution
The force of air coming from the unit is weak.	Adjust the speed up to a higher setting.
The unit does not work.	Check that the plug is connected correctly and that the unit is turned on at the mains supply.
Other abnormal conditions.	Disconnect the fan from the wall and consult a repair specialist.

Care and Maintenance

- Unplug the unit from the mains socket.
- Use a slightly damp cloth to wipe the outer body of the unit.
- Never completely cover the unit with water or use chemicals or detergents as they could damage the unit in some way.

Technical Specifications

Rated Voltage	220-240V~
Rated Frequency	50 Hz
Input Power	45 W
Climate Class	T

Features and specifications are subject to change without prior notice.



E2284



**THE 'V' STANDS
FOR VALUE.**

M.E.W. (Australia) Pty Ltd
15 Vaughan Street
Essendon Fields VIC 3041
ACN 152 719 036

1300 725 885
customercare@gvaproducts.com.au
gvaproducts.com.au

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.

IB-G30DFS15-150612V1