


40CM HIGH VELOCITY FLOOR FAN

G40HVS16

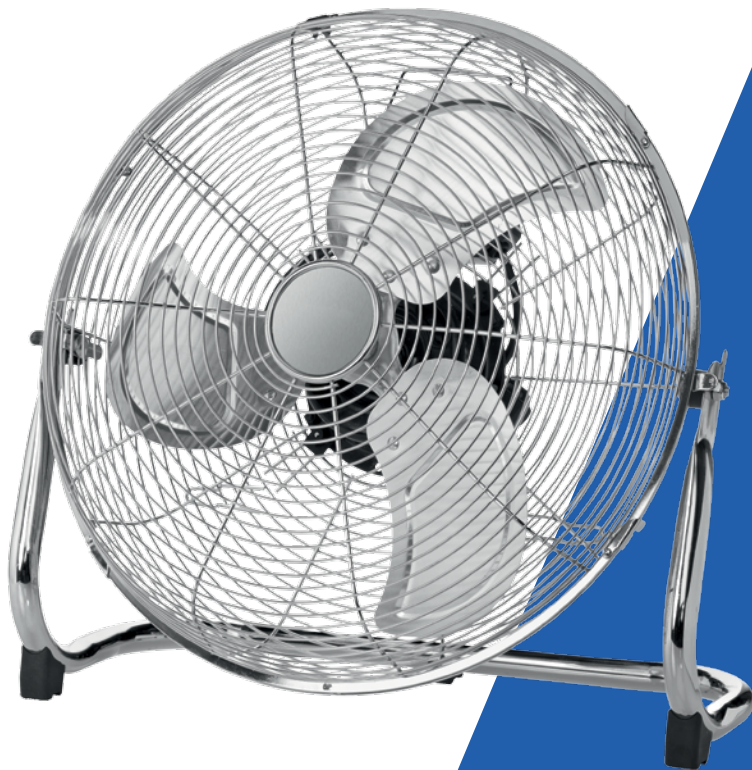

Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

**THE 'V' STANDS
FOR VALUE.**

Contents

Guide to the Appliance	2
Caring for the Environment	3
Safety Information and Warnings	4
Items in the Box	6
Operation Instructions	7
Care and Maintenance	8
Technical Specifications	9

Guide to the Appliance



1. Chrome spiral guard (front and back)
2. Aluminium blades
3. Control panel
 - 0 = Off
 - 1 = Low speed
 - 2 = Medium speed
 - 3 = High Speed
4. Motor (at back)

NOTE: Due to production improvements, the appliance may differ slightly from the diagram shown. Diagrams in this instruction manual are for reference only.

Caring for the Environment

Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again.

Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous to the environment and human health.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling.

The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse.

Safety Information and Warnings

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton. If applicable, pass these instructions on to the next owner of the appliance.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical safety and cord handling

- Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label.
- To protect against fire and electric shock, do not immerse the cord, plug or the appliance itself in water or other liquid, or expose the electrical connections to water.
- To reduce the risk of electrocution, never operate this product with wet hands or spill liquids into the product.
- The power supply cord should be run in such a way that there will be no risk of anyone pulling it inadvertently or tripping over it.
- Do not kink, bend, squash, strain or damage the power cord and protect it from sharp edges and heat.
- Do not pick up or operate the appliance if the power supply cord, plug or housing is damaged, or after it malfunctions or has been damaged in any manner. In such a case, unplug the appliance and contact the after sales support line for advice on repair or replacement.
- A damaged cord or plug must be replaced by the manufacturer or a qualified person in order to avoid a hazard. Contact the after sales support line.
- Unplug the appliance from the power outlet when it is not in use and before cleaning, servicing, moving or storing the appliance.
- To disconnect, turn all controls to the off position and unplug the cord from the wall outlet. When unplugging, grip the plug, do not pull the cord.

We assume no liability for any eventual damages caused by misuse of the appliance or noncompliance with the instructions in this manual.

Safety Information and Warnings

Usage conditions and restrictions

- This appliance is intended for indoor household use only. It is not suitable for commercial or industrial use.
- Do not use the fan outdoors.
- Do not use the fan for anything other than its intended purpose, and only use it as described in this manual.
- We accept no liability for any damage due to improper use or incorrect handling.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Young children should be supervised to ensure they do not play with the appliance. Close supervision is necessary when any appliance is used by or near children.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock and/or personal injury.
- Place the fan on a flat surface when operating to avoid overturning.
- Do not operate the fan in a damp place or in areas high in humidity (such as the bathroom).
- Improper installation may result in the risk of fire, electric shock and/or injury to persons.
- **WARNING!** When the fan is in operation, do not put fingers or any object in the rotating safety grille as this may cause injury and/or damage to the appliance.
- The unit has no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the appliance yourself.

Items in the Box

Contents included in the box



Floor Fan



Instruction Manual

Operating Instructions

Three speed operation

The floor fan is designed to work in three different speed modes, ranging from a gentle breeze (1) to full speed (3).

To start/stop the fan and select a rotating speed.

Press the buttons on the control panel:

- Speed 0 - Stop/Off
- Speed 1 - Low Speed
- Speed 2 - Medium Speed
- Speed 3 - High Speed



Tilt adjustment

Adjust the tilt by tilting the fan head either upward or downward.

Care and Maintenance

Care and cleaning

- Before cleaning the fan, make sure it is switched off and unplugged from the power supply. Do not attempt to take the unit apart. It is not designed to be dismantled without special tools.
- Use only a soft, damp cloth to gently wipe the Fan and dry well.
- Do not immerse the Fan in water and never allow water to enter the motor housing.
- Do not use harsh chemicals to clean the fan.
- Do not use this appliance with a programmer, separate remote control system or any other device that switches the appliance on automatically.
- When you have finished using the fan at the end of the season, wipe off any dust to maintain it in good working order for the next season. Clean and store the fan in its original box in a safe, dry location, protected from dust.
- The appliance requires little maintenance and contains no user-serviceable parts inside. Do not attempt to take it apart, repair or modify it. Do not operate the fan if its power cord or plug is damaged, or when it is working abnormally. In case of damage or malfunction, or if the cord is damaged, have the unit repaired by trained personnel only, or contact the after sales support line for advice on repair or replacement.

Proof of purchase

To receive warranty, retain receipt as proof of purchase.

Technical Specifications

Model No. G40HVS16

Voltage: 230V~

Frequency: 50Hz

Rated power: 35W

Subject to technical change without notice



**THE 'V' STANDS
FOR VALUE.**

M.E.W. (Australia) Pty Ltd
15 Vaughan Street
Essendon Fields VIC 3041
ACN 152 719 036

1300 725 885
customercare@gvaproducts.com.au
gvaproducts.com.au

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.