

# 77CM TOWER FAN WITH TOUCH CONTROL

G77TFW16



Instruction Manual

**12**  
MONTH

MANUFACTURER'S  
**WARRANTY**

**GVA**

**THE 'V' STANDS  
FOR VALUE.**

 


# Contents

---

Guide to the Appliance	2
Caring for the Environment	3
Safety Information and Warnings	4
Items in the Box	8
Operation Instructions	9
Troubleshooting	11
Care and Maintenance	12
Technical Specifications	13

# Guide to the Appliance

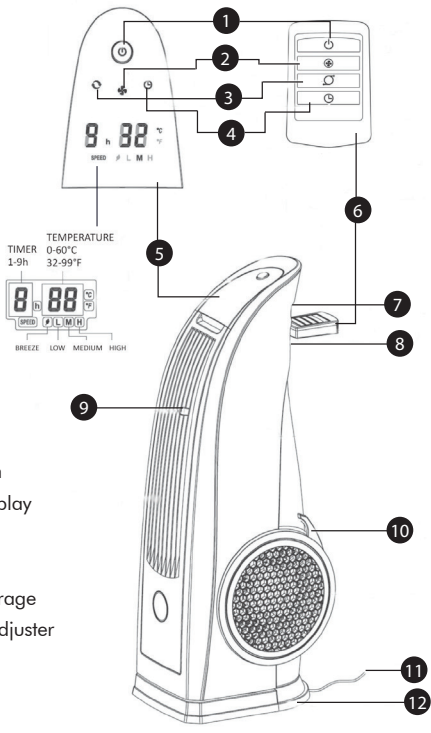

1. On/Off Button
2. Speed Button
3. Oscillating Button
4. Timer Setting Button
5. Control Panel & Display
6. Remote Control
7. Carrying Handle
8. Remote Control Storage
9. Air Flow Direction Adjuster
10. Cord Storage
11. Power Cord
12. Base



Due to production improvements, the appliance may differ slightly from the diagram shown. Diagrams in this instruction manual are for reference only.

# Caring for the Environment

---

## Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

## Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again.

Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous on the environment and human health.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately. Contact your local authorities for advice on recycling facilities in your area.

The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse.

## **Safety Information and Warnings**

Please follow all the safety precautions listed below for safety and to reduce the risk of injury or electrical shock.

- Read all the instructions before operating the appliance and keep them for future reference. If you pass the product on to a third party, include these instructions.
- Your fan should be used in such a way that it is protected from moisture, e.g. condensation, splashed water, etc. Do not place or store your fan where it can fall or be pulled into water or any other liquid.
- Stand the fan on a stable, level surface during use. Do not allow your fan to sit on top of the mains cable.
- Do not remove any fixed covers. Never use this appliance if it is not working properly, or if it has been dropped or damaged. Always contact a qualified technician to carry out repairs. If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

## **Safety Information and Warnings**

---

- If the fan is knocked over during use, turn off the unit and unplug it from the mains socket immediately.
- Do not operate your fan in the bathroom.
- Do not use hazardous chemicals to clean or come into contact with the fan. Never attempt to use the fan without the base parts assembled or in a horizontal position.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- Never allow children to point their fingers into any power sockets or moving parts.

## **Safety Information and Warnings**

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- Ensure that the fan is switched off and fully unplugged from the mains supply before removing the guard.
- Do not operate this appliance with anything other than your hands. Do not use the appliance with wet hands.
- For fans that require assembling, to avoid personal injury, please ensure the product has been fully assembled according to the instructions within this manual.
- The appliance is for household and indoor use only.
- When the appliance is not in use and/or before cleaning, unplug it from the outlet first.
- The appliance is only intended for the purpose described in the user manual. Do not use the appliance or any part of the appliance out of the intended use to avoid risk.



## **Safety Information and Warnings**

 
- The use of attachments which are not recommended or sold by the appliance manufacturer may cause a risk of injury to persons.
- Fan slots and oscillating feature are a potential finger entrapment hazard for toddlers and small children. Parental supervision is required.
- When the fan is assembled, the fan guard should not be taken off anymore.

# Items in the Box

---

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.


The following items are included:

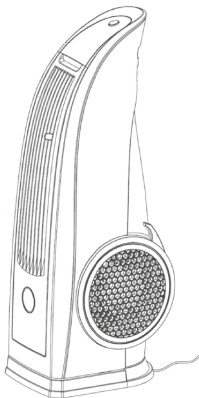

Main Unit



 Remote Control  
(batteries included)

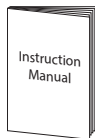

Instruction Manual

# Operation Instructions

---

- Press the ON/OFF BUTTON to switch the fan on or off. To switch off the fan completely, unplug the power cord. Press and hold the ON/OFF BUTTON to change the temperature unit.
- Press the SPEED BUTTON for the required fan speed. The following settings are available:
  - L - The Fan operates at the lowest speed
  - M - The Fan operates at the medium speed
  - H - The Fan operates at the highest speed
  - 🔇 - The Fan is quiet with speed lower than L speed
- To make the fan oscillate, press the OSCILLATING BUTTON. To stop the oscillation, press the OSCILLATING BUTTON again.
- Adjust the air flow direction by moving the AIR FLOW DIRECTION ADJUSTER.
- Press the TIMER SETTING BUTTON repeatedly to set the automatic switch-off timer. Switch-off hour can be set from 1 to 9 hours.
- To replace batteries in the remote control:
  - open the battery compartment
  - remove the old batteries
  - insert 2 x AAA batteries, make sure the polarities match
  - close the battery compartment

# Operation Instructions

---



## **Handling the Batteries**

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual.
- When the batteries are exhausted, the remote control will not function. Replace both batteries at the same time with new ones.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.

## **Handling the Remote Control**

- Do not drop or cause impact to the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as it could cause corrosion or battery leakage and may result in physical injury and/or property damage including fire.

# Troubleshooting

---

Problem	Solution
The force of air coming from the unit is weak.	Adjust the speed up to a higher setting.
The unit does not work.	Check that the plug is connected correctly and that the unit is turned on at the mains supply.
Other abnormal conditions.	Disconnect the fan from the wall and consult a repair specialist.

## Care and Maintenance

---

- Unplug the unit from the mains socket.
- Use a slightly damp cloth to wipe the outer body of the unit.
- Never completely cover the unit with water or use chemicals or detergents as they could damage the unit in some way.
- Do not dismantle the unit to clean.

# Technical Specifications

---

Rated Voltage	220-240V~
Rated Frequency	50 Hz
Input Power	85 W
Climate Class	T
Ambient Operating Temperature	40°C

Features and specifications are subject to change without prior notice.



E2284



**THE 'V' STANDS  
FOR VALUE.**

M.E.W. (Australia) Pty Ltd  
15 Vaughan Street  
Essendon Fields VIC 3041  
ACN 152 719 036

1300 725 885  
[customercare@gvaproductions.com.au](mailto:customercare@gvaproductions.com.au)  
[gvaproducts.com.au](http://gvaproducts.com.au)

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.

IB-G77TFW16-160718V1