

2000W UPRIGHT FAN HEATER

GUFH2K15



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY


GVA

THE 'V' STANDS
FOR VALUE.

Contents

Guide to the Appliance	2
Caring for the Environment	3
Safety Information and Warnings	4
Getting Started	7
Operation Instructions	8
Care and Maintenance	9
Technical Specifications	10

Guide to the Appliance

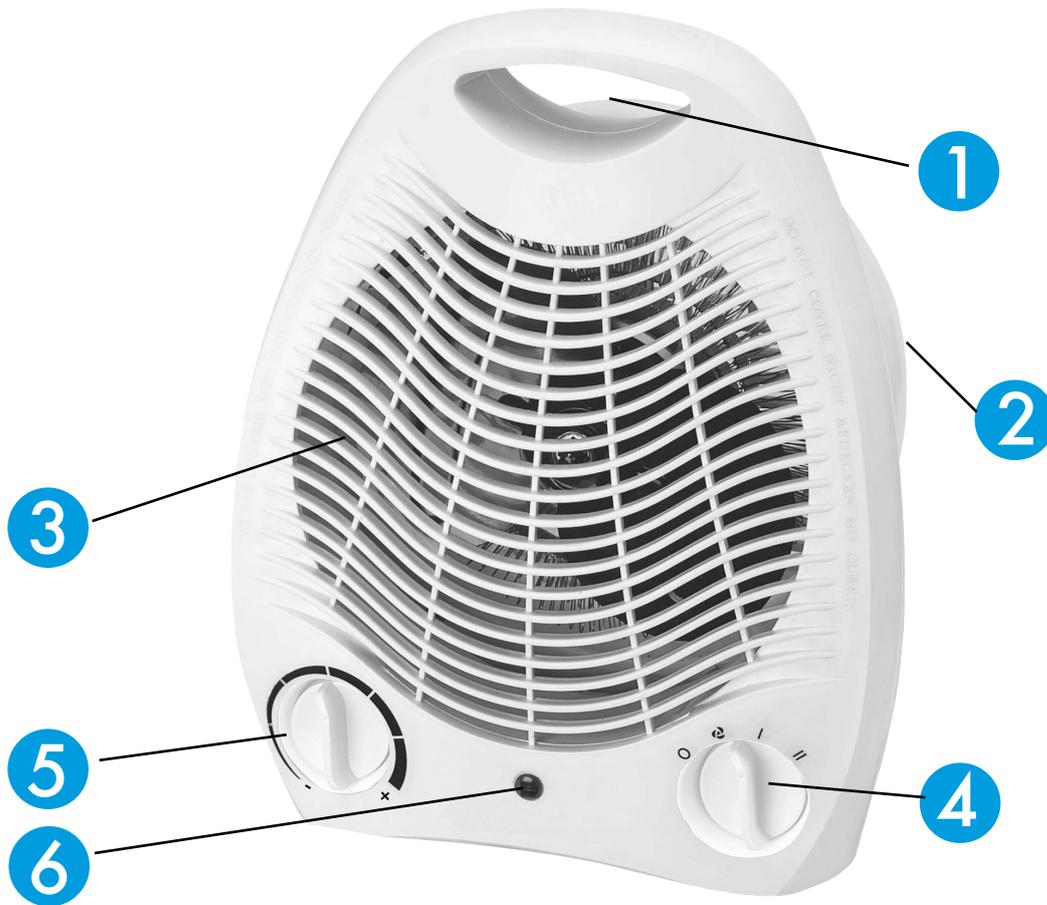

1. Carry handle
2. Air inlet grill (at rear)
3. Air outlet grill
4. Heat setting control knob
5. Thermostat control knob
6. Power indicator light

NOTE: Due to production improvements, the appliance may differ slightly from the diagram shown. Diagrams in this instruction manual are for reference only.

Caring for the Environment

Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again.

Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous to the environment and human health.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling.

The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse.

Safety Information and Warnings

Read this instruction manual thoroughly before first use and keep it in a safe place for future reference, along with the warranty card and purchase receipt. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical safety and cord handling

- **Voltage:** Before plugging in, ensure your outlet voltage and circuit frequency corresponds to the voltage stated on the appliance rating label.
- **Exclusive outlet:** Plug the heater into a separate, properly earthed electrical outlet and ensure no other appliance is in use on the same electrical circuit.
- **No extension cord:** Do not use the heater with an extension cord as this may overheat and cause a fire risk.
- **Protect from water:** To protect against fire and electric shock, do not immerse the cord, plug or the heater in water or other liquid, or expose the electrical connections to water. Ensure your hands are dry before handling the plug or switching on the heater.
- **Damage:** Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the manufacturer, its authorised service centres or appropriately qualified personnel in order to avoid any hazards.

WARNING Do not pick up or operate the heater if the power cord, plug or housing is damaged or after it malfunctions or has been dropped or damaged in any way.

In case of damage, contact GVA customer care for advice.

- **Disconnect:** Always switch the heater off and unplug it when it is not in use and before cleaning, moving or storing it. Pull by the plug, do not pull the cord.
- **Protect the power cord:**
 - Do not operate the heater with the power cord coiled up.
 - Do not put the cord on top of, or wrap it around the heater.
 - Do not twist or kink the cord or let it touch heated surfaces.
 - Do not put any stress on the cord where it connects to the product.
 - Do not carry the heater by the cord.
 - Arrange the cord away from any traffic area so no one will trip over it.
 - Do not run the cord under carpeting or cover it with rugs or runners.
- **RCD:** Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.

For indoor use only!

WARNING: In order to avoid overheating, do not cover the heater.

Safety Information and Warnings

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;

Usage conditions and restrictions

- Domestic use only: This appliance is intended for indoor household use only. It is not suitable for commercial, industrial or outdoor use. Do not use it for anything other than its intended purpose, and only use it as described in this manual. Any other use may cause fire, electric shock or injury.
- No outdoor use: Do not use the heater outdoors or on wet surfaces. Protect it from liquid spills.
- Not a dryer: Do not use the heater to dry clothes.
- Usage restriction: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children: Supervise young children to ensure they do not play with the heater. Close supervision is necessary when any appliance is used by or near children.
- Unattended: Never leave the heater unattended while it is in use. If it must be left operating while you leave the room temporarily, make sure the heater is out of the reach of children and pets.
- Ventilation: Use this heater in a well-ventilated area. Do not insert or allow objects to enter any openings. To prevent a possible fire, do not block air intakes or exhaust openings in any manner. Wipe air openings clean if they become clogged.
- Location: Place the heater on a flat, steady, stable, dry and heat-resistant surface when operating to avoid overturning.
- Do NOT use the heater the following areas:
 - Immediately in front of or below an electrical outlet.
 - Near flammable materials, surfaces or substances (such as furniture, cushions, bedding, papers, clothes and curtains). Keep such materials at least 1m from the front of the heater and away from its sides and back.
 - On or near surfaces that may be damaged by heat (such as delicate rugs, wall paper, floor coverings not made of heat-resistant material).
On soft surfaces such as bedding or soft carpeting, where openings may become blocked.
 - In any areas where petrol, paint or other flammable liquids are stored.
 - In the immediate surroundings of a bath, shower, laundry tub or swimming pool, or where it may fall into a tub or other water container.
 - Outdoors, on wet surfaces, or where it can get splashed with water.
- Do not cover: Do not cover the heater in any way as it may overheat and become a fire risk.

Safety Information and Warnings

- No timer: Do not use this heater with a programmer, timer or any other device that switches it on automatically. If the heater is covered or positioned incorrectly, this could present a fire risk.
 - While sleeping: Do not use the heater while sleeping; do not place it near a person who is sleeping.
 - **WARNING** Never insert fingers or allow objects to enter any openings as this may cause an electric shock, fire, or damage to the heater.
 - Cleaning: Always ensure the heater is kept clean and free of dust. Make sure it is disconnected from the power supply and then clean it with a damp cloth (not wet). Do not use abrasive cleaning products.
 - Repair: The heater has no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the appliance yourself. Contact GVA customer care if your heater is not working properly.
 - Liability: We accept no responsibility for any eventual injuries or damages caused by misuse of the product and/or failure to follow these instructions.
- CAUTION: HOT!**
- This heater is hot when in use. To avoid burns and personal injury, do not allow bare skin to touch hot surfaces.
 - Do not move or store the appliance while it is still hot. Allow it to cool before handling, cleaning and storing.

Getting Started

Before first use

- Unpack the appliance and keep all packaging materials until you have made sure your new fan heater is undamaged and in good working order.
- Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.
- Inspect the cord for damage or wear before each use. Do not use the heater if its cord has been damaged or is not working properly. In such a case, contact GVA customer care for advice.

Operation Instructions

NOTE: Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the appliance before use. This appliance requires no installation, it should be used solely as a portable appliance.

WARNING keep all objects at least 1 metre from the front, sides and rear of the appliance.

Heat control switch

The control switch positions are:

"0" = OFF

 = Fan Only

"I" = Low Heat

"II" = High Heat

Check that the heat control switch is set to Off position before plugging the heater into the mains supply.

For greater economy, use the High Heat setting initially and then switch to the Low Heat setting.

For the Low and High Heat settings the fan remains at the same speed; only the element changes to create the greater/lesser heat output.

Thermostat

Turn the thermostat knob clockwise until you reach the maximum temperature on the graduated scale. When the desired room temperature is reached, slowly turn the knob anti-clockwise until the heater turns off (you will hear a click). The heater will now cycle on and off to maintain the set temperature.

WARNING: In order to avoid overheating, do not cover the heater.

Care and Maintenance

Safety device

This appliance has three protection devices:

The first device will automatically turn the appliance off if the appliance is not in the appropriate operating position.

The second device automatically disconnects & reconnects the appliance at a pre-set temperature.

The third device disconnects the appliance permanently in case of overheating, by means of a thermal fuse (it is non resettable).

Care and cleaning

The heater requires regular cleaning to ensure trouble free operation:

Unplug the heater from the mains supply before cleaning.

Ensure that the heater has been allowed to cool down completely before cleaning.

Use a damp cloth (not wet) to wipe the exterior of the heater to remove dust and dirt.

Use a vacuum cleaner to remove dust and fluff from around the grills.

Never use solutions such as benzene, thinners or polishing agents.

Ensure the heater is dry before plugging back into the mains supply.

CAUTION the heater generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically.

Do not attempt to dismantle the heater. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

Proof of purchase

To receive warranty retain receipt as proof of purchase.

Technical Specifications

Model No: GUFH2K15

AC 220 -240 V 50Hz 1800-2000W

FOR INDOOR USE ONLY

Subject to technical change without notice



**THE 'V' STANDS
FOR VALUE.**

M.E.W. (Australia) Pty Ltd

15 Vaughan St

Essendon Fields VIC 3041

ACN 152 719 036

1300 725 885

customercare@gvaproductions.com.au

gvaproducts.com.au

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.