

Family Sized Electric Grill

/ GVA1200G



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

THE 'V' STANDS
FOR VALUE.

Please read and save all instructions to ensure safe and effective use of this Appliance

Important Safety and General Instructions

Please keep this user manual in a safe place along with your purchase receipt and carton for future reference. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

1. Read all instructions before using the Electric Grill.
2. DO NOT touch hot surfaces. The temperature of the outer surface can get very hot while the Electric Grill is in operation. DO NOT touch any other surface except for the products handles only.
3. DO NOT use the Electric Grill for other than its intended use.
4. Ensure that you position the Electric Grill in a location which is inaccessible by children, to ensure your child's safety.
5. Before turning on, ensure the electrical voltage and frequency of the circuit correspond to those indicated on the rating label of the appliance.
6. To protect against the risk of electric shock, do not immerse this Electric Grill, cord set or plug in water or any other liquid.
7. The Electric Grill is not intended to be operated by means of an external timer or any type of separate remote control system.
8. This appliance is designed for indoor use only. DO NOT use outdoors.
9. DO NOT use an extension cord unless completely necessary with this product. If an extension cord is used please ensure that it has a rating equal to, or exceeding, the rating of this appliance.
10. DO NOT pull or carry by the cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.

11. DO NOT bend or damage the power cord.
12. Always unplug the Electric Grill when not in use. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord. The power plug must be removed from the power socket before cleaning, servicing, maintenance or moving the Electric Grill
13. Never force the plug into an outlet.
14. DO NOT place the appliance near a hot gas or electric burner.
15. DO NOT cover the appliance whilst in use. If it is covered there is a risk of fire.
16. Improper installation may result in the risk of fire, electric shock and/or injury to persons.
17. If the supply cord or plug is damaged, DO NOT use the Grill. Please return to your place of purchase along with your receipt for a refund or exchange.
18. The manufacturer or retailer is not responsible for any eventual damages caused by improper or faulty use.
19. The unit has no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the appliance.
20. Always operate on a dry level surface. Operating on sinks or uneven surfaces must be avoided.
21. DO NOT clean with metal scouring pads.
22. This product is designed for domestic use only and not for commercial purposes.
23. The Electric Grill is best located on a heat proof surface or mat.
24. Do not locate this unit directly under a cupboard or in an area with a low ceiling as this may cause heat build-up.
25. Never use any utensil which may scratch the non-stick coating.

Understanding your Electric Grill



1. Large Heat Proof Handle

The handle is made from cool touch plastic to ensure your safety.

2. Indicator Lights

The indicator lights tell you when the cooking plates are hot enough to begin using.

3. 2 Non-Stick Cooking Plates

The dual cooking surfaces are made from die cast aluminium and allows for cooking time to be halved by cooking both sides at once.

4. Drip Tray

The bottom cooking plate is angled to ensure that the fats expelled during cooking are drained and then caught in the drip tray. This contributes to a healthier, tastier meal.

5. Floating Hinge

Ensures that all foods are cooking on both sides regardless of the size of the food to be cooked.

6. Non-Slip Feet

The non-slip feet add to the Grills overall stability.

Before Using for the First Time

- 1) Ensure all packaging, labels and accessories have been removed from the unit
- 2) Position the Electric Grill in a well-ventilated area, on a stable and level surface. Ensure that the surface is heat resistant and/or place the Grill on a heatproof mat. Ensure that flammable materials and curtains are not in the vicinity of the Electric Grill.
- 3) Thoroughly clean both cooking plates using a soft damp cloth and wipe dry with a towel.
- 4) Place the drip tray under the front lip of the bottom grill plate to ensure all fat that is expelled from the food drains into the drip tray.
- 5) It is recommended that you lightly wipe the cooking plates with cooking oil when the unit is heated for the first time. This will help cure and protect the nonstick cooking plates.
- 6) When connecting the Electric Grill to the power outlet, ensure that the Electric Grill is closed. The Power indicator light will illuminate red to let you know that the unit is switched on. The ready indicator light will illuminate green when the temperature is ready. The ready indicator light will turn off and on as the thermostat regulates the temperature.
- 7) Before using for the first time, turn the Grill on for approximately 10 minutes with the lid closed. Turn the Grill off, allow it to cool and then wipe it over with a damp cloth. Your Electric Grill is now ready for general use.

Cooking Tips

- 1) Cooking times will vary depending on the type, thickness and volume of foods. Increase times accordingly.
- 2) Do not cook frozen food and do not attempt to defrost frozen food on the grill. All food must be completely defrosted before cooking.

Using your Electric Grill

- 1) Place the grill on a heat proof, flat surface away from anything flammable.
- 2) Place the drip tray under the front lip of the bottom grill plate to ensure all fat that is expelled from the food drains into the drip tray.
- 3) Connect your Electric Grill to the power outlet. Ensure that the Grill is closed. The Power indicator light will illuminate red.
- 8) The Ready indicator light will illuminate green when the Electric Grill has reached the correct cooking temperature. NOTE: The ready indicator light will turn off and on as the thermostat regulates the temperature.
- 4) Open the grill by lifting the cool touch handle of the top grilling plate.
- 5) Using tongs or a spatula, place the food to be cooked on the bottom plate and lower the top plate (never use metal utensils to add food to the Grill as they will scratch the non-stick surface). The floating hinge design and the weight of the plate will automatically adjust to the thickness of the items to be cooked, and will gradually and evenly press the food. Food that is ideal for this grill are burgers, boneless pieces of meat, thin cuts of meat and/or vegetables
- 6) The cooking time will depend on the type of food you are cooking and its thickness. Cook food to requirements or your liking. You can check the cooking progress by lifting the top plate by its cool touch handle. NOTE: Most parts of the Grill will be HOT during the cooking process. Do not touch any part of the Grill other than the handle, until the entire Grill is completely cool.
- 7) When the food has finished cooking, raise the top plate by lifting the handle and remove the food with a plastic, wooden or silicone spatula or tongs. Never use metal utensils as they can scratch the non-stick surface.

Cleaning your Electric Grill

1. Before cleaning, unplug the unit and allow it to cool.
2. Never place the unit in water or under running water (or any other liquid). DO NOT ALLOW ANY WATER, OR OTHER LIQUID, TO ENTER THE UNIT.
3. To clean the outside of the Electric Grill, use a damp cloth and dry carefully with a soft dry cloth.
4. To clean the plates, use a sponge that has been dampened in a weak solution of dishwashing detergent and water. Wipe clean with sponge or a cloth dampened in water only and dry carefully.
5. If you experience stubborn build up on the plates use a plastic scraper or brush to remove.
6. Never use a scouring pad, steel wool, cleaning powder, solvents or abrasives as this may scratch or ruin the non-stick surface.
7. If you are cleaning the unit whilst open, ensure you steady the top plate by holding the handle.
8. Wash the drip tray in warm, soapy water or place in the top rack of the dishwasher.

Storing your Electric Grill

1. Before storing, ensure the unit has been unplugged, cooled and cleaned.
2. Close the top plate so the handle faces upward (to access cable compartment). Place the power cable in the compartment on the base of the unit.
3. Store the product in a clean and dry place in an upright position.

Warning: This appliance gets extremely hot during operation and should always be handled with care. Never put flammable objects on or near the grill as they could be set alight.

NOTE: There are no serviceable parts in this appliance. If the appliance is not functioning correctly, firstly ensure that you have followed all instructions correctly and that power is correctly being supplied to the unit. If the appliance still fails to work, please return it to your place of purchase along with the receipt and packaging.

The manufacturer or retailer is not responsible for any eventual damages caused by improper or faulty use.

Warranty Details

Our Goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



Item# GVA1200G

