

1.7 Cordless White Kettle

/ GVA2019



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

THE 'V' STANDS
FOR VALUE.

Important Safety Instructions

Store this instruction manual in a safe place, along with your warranty card, purchase receipt and packaging box for future reference. Please pay particular attention to the safety information.

- Before commissioning this device please read the instruction manual carefully.
- Please keep these instructions, the guaranty certificate . the sales receipt and, if Possible .the carton with the inner packaging!
- The device is intended exclusively for private and not for commercial use!
- Always remove the plug from the socket whenever the device is not in use, when attaching accessory parts, cleaning the device or whenever a disturbance occurs . Switch off the device beforehand. Pull on the plug .not on the cable.
- In order to protect children from the dangers of electrical appliances, never leave them unsupervised with the device. Consequently, when selecting the location for your device. do so in such a way that children do not have access to the device. Take care to ensure that the cable does not hang down.
- Test the device and the cable regularly for damage. If there is damage of any kind. the device should not be used.
- Do not repair the device yourself, but rather consult an authorised expert
- For safety reasons a broken or damaged mains lead may only be replaced by an equivalent lead from the manufacturer, our customer service department or a similiary qualified person.
- Keep the device and the cable away from heat, direct sunlight, moisture. sharp edges and suchlike.
- Never use the device unsupervised! Switch off the device whenever you are not using it, even if this is only for a moment.
- Use only original accessories.
- Do not use the device outdoors.
- Under no circumstances must the device be placed in water or other liquid, or come into contact with such. Do not use the device with wet or moist hands.
- Should the device become moist or wet, remove the mains plug from the socket immediately. Do not reach into the water.
- Use the device only for the intended purpose.

Cleaning and Care

- Use only cold water when filling.
- The water level must be between the MAX. and MIN. marks!
- Switch the machine off before removing it from the base.
- Always ensure that the lid is tightly closed.
- The base and exterior of the machine must not become wet

First Use of The Machine

Before using the machine for the first time water should be boiled in it twice without any additives.

1. Place the machine on a flat surface.
2. Fill the kettle with water. Do not overfill! Use the water level indicator.
3. Place the kettle flush on the base.
4. Electrical connection
 - Check whether the electrical voltage that you intend to use is the same as that of the machine. Details are to be found on the label on the base.
 - Only connect the machine to a properly installed 230V 50Hz safety socket.
5. Switch the machine to position "1".The control lamp on the water level indicator shows that the water is being boiled.
6. After boiling the machine switches off automatically.
 - Disconnect the machine from the mains electricity supply.
 - Do not press up the lid when pouring.

Cleaning

Always remove the plug from the mains supply before cleaning the machine!

The exterior of the machine should be cleaned, if necessary, with a slightly damp cloth without additives.

The calcium filter can be removed for cleaning.

power supply:220~240V ~50Hz 1850~2200W

Parts List



- 1 Handle
- 2 Lid opening lever (pull down to open)
- 3 Lid
- 4 Spout
- 5 Water gauge
- 6 Body
- 7 Power base
- 8 On/off switch

