

Barrel Vacuum

/GVA208



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA


**THE 'V' STANDS
FOR VALUE.**

Safety directions

(Please read the instructions carefully and keep the manual for future use)

1. Before the first operation, make sure the dust barrel is properly installed.
2. Make sure the power supply is 220-240V, 50/60Hz
3. Do not vacuum water and flammable material.
4. Do not vacuum burning material and ashes.
5. Do not use the machine without a motor protection filter filled.
6. Please change the dust barrel immediately if damaged.
7. Do not store or use the machine close to high temperature places.
8. If an unusual noise, smell, smoke or any other failure or breakage happens during the operation, you should turn off the switch and unplug it. Immediately contact your service center for repair.

Description of Product:

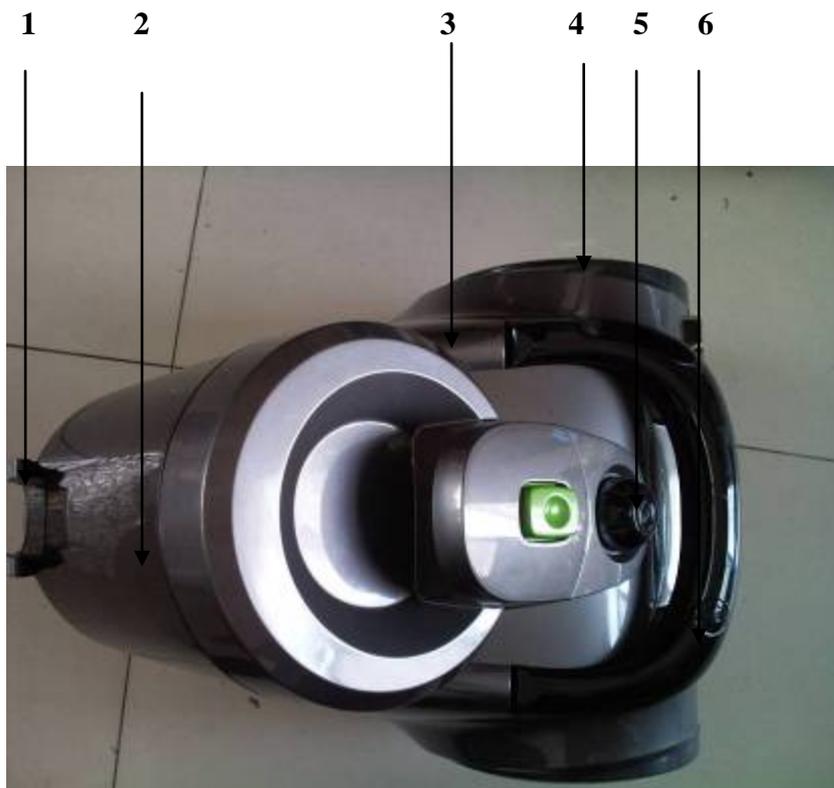

1. hose connection

2. dirt cup sets

3. body

4. big wheel

5. switch

6. cord rewind button

Operation

1. Connect the hose accessories: insert the hose end into the hose socket at the block suction and then hook it. (Fig. 1)
2. Connect the plastic tube to the curved end of the hose. (Fig. 2)
3. Connect the different nozzle tools to the metal extension tube for different cleaning purpose: Floor brush for carpet or floor (Fig. 3); combined brush and nozzle for sofa, wall surface, curtain, corner or space between furniture and etc. (Fig. 4)
4. Cord rewinding: hold the plug and pull out the cord; press the cord rewinding pedal, the power cord will be drawn in. (Fig. 5)
5. Start the machine: insert the plug of the cord into the power socket, and press the on/off switch pedal, the machine should then start working. (Fig 6)



1



2



3



4



5



6

Maintenance

1. Clean the dirt cup. A factor to your machine sucking up dirt efficiently is when the dust holder is regularly cleaned and emptied.
 - Press the cup locket (Fig. 1)
 - Take out the cup sets and open the cover (Fig. 2)
 - Twist the filter and take out the HEPA (Fig. 3 / 4)
2. Clean the air outlet plate filter. Remove the air outlet plate by hand. Wash it with water and dry it before using it again. Change the filter when it's broken. (Fig. 5 / 6)



1



2



3



4



5



6

WARNING:

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.