

40cm Pedestal Fan

/ GVA40PF



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

THE 'V' STANDS
FOR VALUE.

Important Safety Instructions

Store this instruction manual in a safe place, along with your warranty card, purchase receipt and packaging box for future reference. Please pay particular attention to the safety information.

- Use this fan only as described in this manual. Other use not recommended may cause fire, electric shock or injury.
- This product is intended for household, industrial and commercial use only. It is not intended for outside use.
- Fans are designed to create rapid air movement, therefore, make sure the fan is not placed near drapes or curtains, or any objects that may be drawn into the fan outlet.
- Never connect the fan to any power source other than the volt alternating current polarized outlet.
- To protect against electric shock, do not place fan in window, immerse unit plug or cord in water or spray with liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug the fan from the outlet when not in use, when moving fan from one location to another and before cleaning.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Do not place the fan or any parts near an open flame, cooking or other heating appliance.
- Do not operate the fan with a damaged cord, plug, after a malfunction or if dropped or damaged in any manner.
- Avoid contact with moving fan parts.
- To disconnect grip the plug and pull it from the wall outlet. Never yank the cord.
- Always use on a dry level surface.
- Do not operate if the fan housing is removed or damaged.
- Do not operate without fan grilles properly in place.
- Warning: To reduce the risk of fire or electric shock, do not use this fan with any outer speed control.
- Do not leave the fan running unattended.
- Ensure that the fan is switched off from the supply mains before removing the guard.
- If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

-
- Never insert fingers, pencils, or any other object through the grille when fan is running.
 - Disconnect fan when moving from one location to another.
 - Disconnect fan when removing grilles for cleaning.
 - Be sure fan is on a stable surface when operating to avoid overturning.
 - DO NOT use fan in window. Rain may create electrical hazard.
 - Indoor use only.

Parts of your Pedestal Fan

1. Safety grille
2. Silent operation
3. 3 speed switches
4. Tilt adjustable pivoting head



Operation of your Pedestal Fan

Your new 40cm Pedestal Fan has been shipped un-assembled to reduce waste age of packing material, paper cartons and weight. Please keep these instruction handy as they outline how to simply and easily assemble the fan.

1. After removing everything from the carton, locate the motor unit and spin the plastic nut in an anti-clockwise direction to undo. (Figure 1)


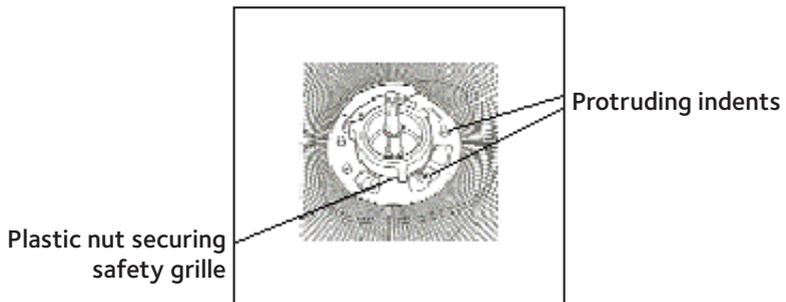


Figure 1


2. Locate the rear safety grille and position over the protruding intents. The safety grille will only fit one way over the protruding intents with the handle facing up. Replace the plastic nut and tighten, taking care to not over-tighten

3. Locate the fan blades and locking nut. Position the blades over the metal spindle of the motor and line up the groove on the blades with the "T" protruding from the metal spindle. After the blade has been put on, tighten the locking nut in the reverse direction, taking care to not overtighten. As the bolt is secured in the opposite direction the spinning blades, the locking nut will tighten gradually with the operation of the appliance. (Figure 2.)

Figure 2

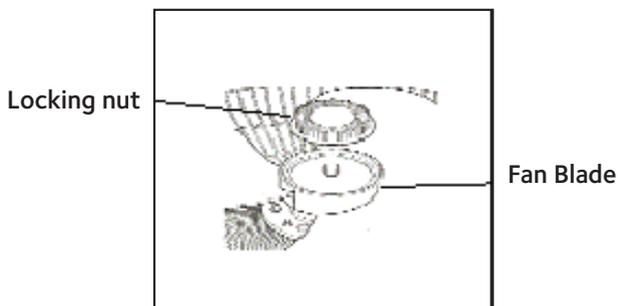


4. The safety grille has 4 clips that now need to be lifted to allow the fan to completely assemble. (Figure 3.)

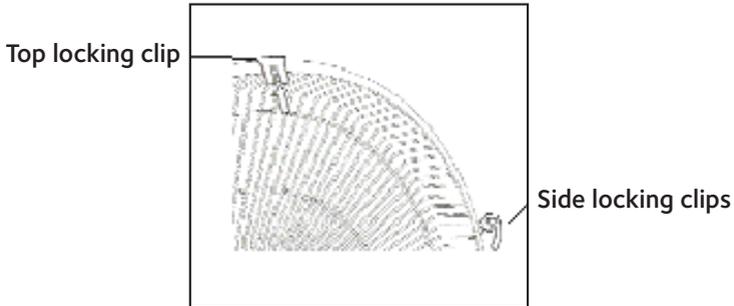


5. Align the top locking clip to the top of the rear safety grille that has already been secured to the fan motor. Lock the side locking clips in place and align the bottom hole for a security nut and bolt. Undo the security lock and bolt and thread the aligned holes in the security tools before doing up the bolt with a pair of pliers or similar tool.

6. A screwdriver will be required to assemble the fan base. Remove the 4 sets of nuts from the bolts and align the fan pole over the corresponding holes in the base. Secure the base by screwing the nuts and bolts back in. (Figure 4.)

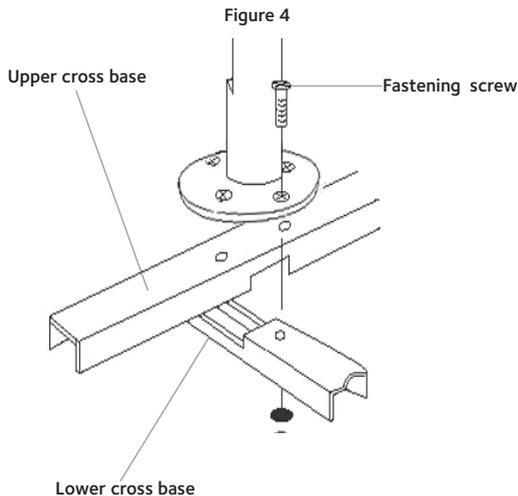

7. The chrome metal tube is height adjustable in the stand. Loosen the collar holding the chrome metal tube in place and extend to desired length (Note: the metal tube may be located inside the lower housing of the chrome tube). Once the desired height is reached, tighten the fastening collar to secure the tube. The motor housing will drop on to the chrome tube where it will need to be fastened with the thumb screw provided. (Figure 5.)

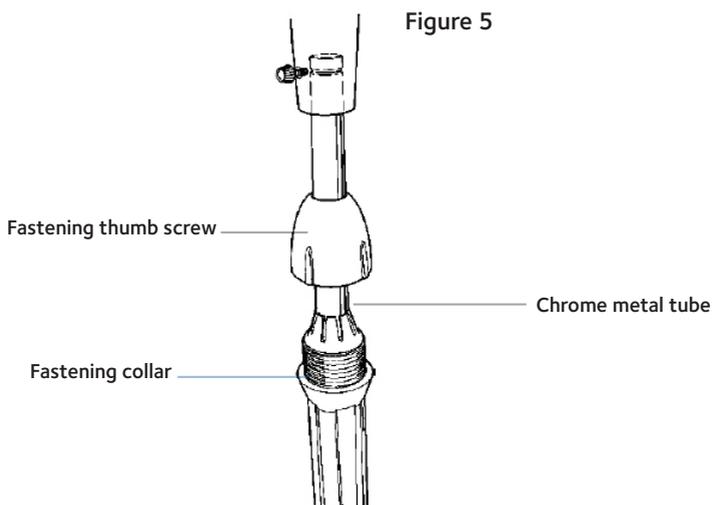

Care & Cleaning Instructions

Please always ensure appliances are disconnected from the power supply and are switched off before attempting any cleaning

The appliance is not designed to be dismantled without special tools. Please do not attempt to separate the unit. Cleaning of the unit should only be attempted with a slightly damp cloth. After wiping down the unit with the damp cloth, dry any wet spots with a dry paper towel.