

# BUFFET SERVER

GVABS31



Instruction Manual

**12**  
MONTH

MANUFACTURER'S  
**WARRANTY**

**GVA**


**THE 'V' STANDS  
FOR VALUE.**

# Contents


---

Guide to the Appliance	2
Caring for the Environment	3
Safety Information and Warnings	4
Operation Instructions	6
Care and Maintenance	7
Technical Specifications	8

# Guide to the Appliance

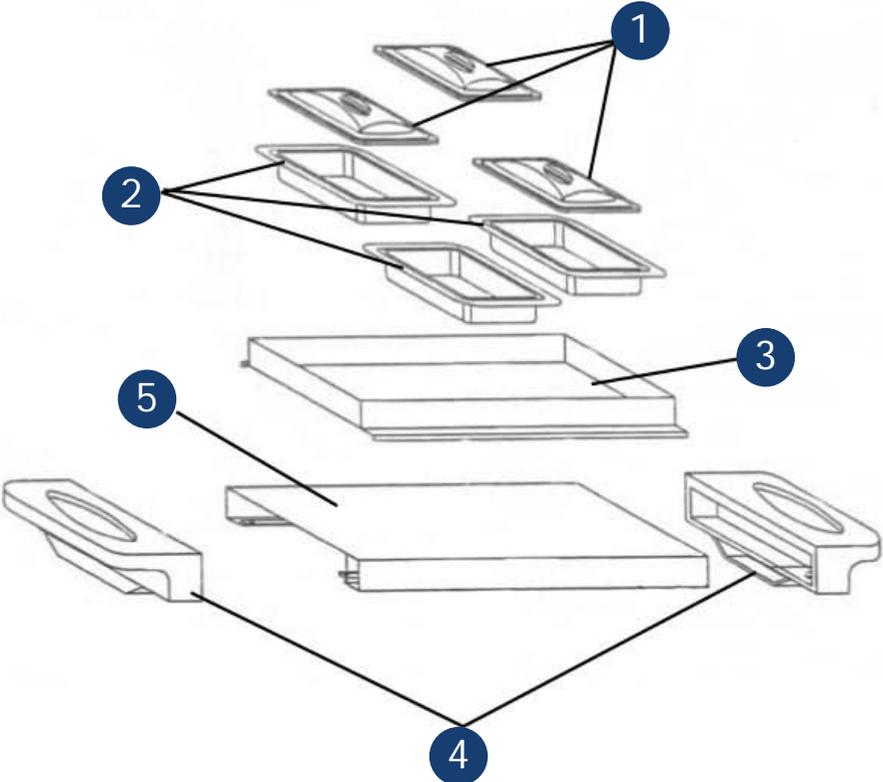

- 1. 3 Lids
- 2. 3 Warming pans
- 3. Frame for the warming pans
- 4. Cool touch handles
- 5. Warming tray
- 6. Temperature control and indicator light

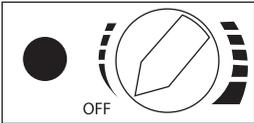

6

# Caring for the Environment

---

## Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

## Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again. Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous on the environment and human health.

# Safety Information and Warnings

---

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with the warranty card, purchase receipt and carton. If applicable, pass these instructions on to the next owner of the appliance.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

- Before first use, make sure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating plate.
- Do not leave the appliance unattended while connected to the mains power supply.
- Do not immerse the appliance in water or any other liquids.
- After use and before cleaning or repair, make sure to unplug the power cord.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place you at serious risk.
- Do not operate the appliance with a damaged plug or cord, after a malfunction or after it has been dropped or damaged in any way.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is intended for household use only and should not be used for commercial purposes. Do not use it for anything other than its intended purpose.
- This appliance is intended for domestic use only, which includes use in households, staff kitchen areas in shops, offices and in other working environments. This can also be used in other residential type environments.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person who responsible for their safety.
- Young children should be supervised to ensure they do not play with the appliance.
- Close supervision is required when using this appliance near children. Never leave the appliance within reach of children.
- Do not touch hot surfaces, use the handle or knobs to handle.
- Never cover or place your hand over the steam vents when using the appliance.
- To ensure safe operation, place the appliance on a stable, heat-resistant surface.
- Any meat dishes placed in the Food Heating Tray must be thoroughly cooked first. Do not place raw meat in the Food Heating Tray.

# Safety Information and Warnings

---

- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;

# Operation Instructions

---

## Using the buffet server

NOTE: There will be a faint smell when using the buffet server for the first time. This is normal and no cause for concern. It will fade away with use.

### **WARNING!**

This appliance will get very hot during use, please use it with extreme caution.

- Before first use, wash the warming pans and lids in warm water and a little mild detergent to remove all dust and residues from the manufacturing process. Dry the parts thoroughly and place the warming pans into the frame.
- Place the warming tray on a stable, heat-resistant surface and place the frame for the warming pans securely on top.
- Plug the appliance into the mains power supply and turn the temperature control clockwise to switch the appliance on. The indicator light will illuminate red and will turn off when the set temperature is reached.
- Place the warming pans into the frame and add your prepared food into the pans.
- Adjust the temperature to the desired heat. The indicator light will cycle on and off while maintaining the correct temperature. It is not recommended to keep this appliance on for more than 6-8 hours at any one time.
- After use, unplug the appliance from the mains power supply and allow it to cool down for at least 90 minutes before cleaning and storage.

## Using the warming tray without warming pans and frame

- Place the warming tray on a stable, heat-resistant surface, plug it into the mains power supply and switch the appliance on. The indicator light will illuminate red and will turn off when the desired temperature is reached.
- Preheat the appliance for 10 minutes.
- Place plates or bowls of hot, cooked food onto the tray for warm-keeping. Food must be precooked and already hot as this appliance is not designed for heating up cold or frozen food.
- After use, unplug the appliance from the mains power supply and allow it to cool down for at least 90 minutes before cleaning and storage.

# Care and Maintenance

---

**CAUTION:** Always ensure the appliance is unplugged from the mains power supply and has thoroughly cooled before cleaning or storage.

- Remove each warming pan and the frame and wash the parts in warm water with a little mild detergent. Rinse well and dry thoroughly.
- Wipe the warming tray with a soft cloth, moistened with a little water and mild detergent.
- Do not use any abrasive cleaning agents or allow water to spill or seep into the frame.

**WARNING:** Never immerse the warming tray, cord or plug in water or any other liquid.

- Reassemble the buffet server and store it in a cool, dry place.

# Technical Specifications

---

## Specifications:

Model: GVABS31

Features: 3 removable buffet pans with clear lids, adjustable temperature control, slowly heat or keep food at the right temperature.

Rated parameter: AC220-240V 50Hz 250-300W

Made in China







**THE 'V' STANDS  
FOR VALUE.**

M.E.W. (Australia) Pty Ltd  
15 Vaughan St  
Essendon Fields VIC 3041  
ACN 152 719 036

1300 725 885  
[customercare@gvaproducts.com.au](mailto:customercare@gvaproducts.com.au)  
[gvaproducts.com.au](http://gvaproducts.com.au)

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.