

# DVD Player

/ GVAD200B



## Instruction Manual

**12**  
MONTH

MANUFACTURER'S  
**WARRANTY**

**GVA**

THE 'V' STANDS  
FOR VALUE.

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with manufacturer instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

## Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, should be placed on the apparatus.
- The mains plug is used as the disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- Batteries must not be exposed to excessive heat such as sunshine, fire or the like.
- Caution markings are located at the rear or bottom of the apparatus.
- The marking information is located at the rear or bottom of apparatus.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children must be supervised to ensure that they do not play with the appliance. If the supply cord is damaged, it must be replaced before further use by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## WARNINGS AND PRECAUTIONS

- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Do not mix old and new batteries.  
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.



**WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**




This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

# Introduction and Setup

## Power



Plug the attached AC cord into a standard AC power outlet to power the DVD player.

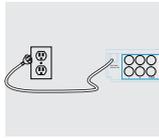


## Remote

Requires 2 AAA batteries (not included).

Do not mix old and new batteries.  
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries

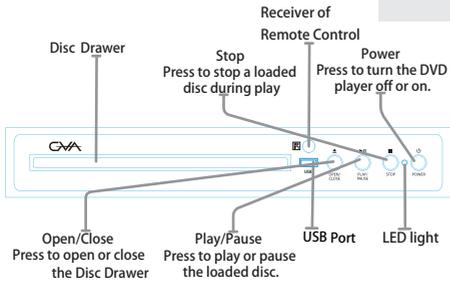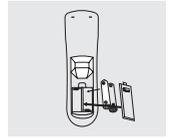


## Y Pb Pr (COMPONENT) OUTPUTS (Progressive Scan)

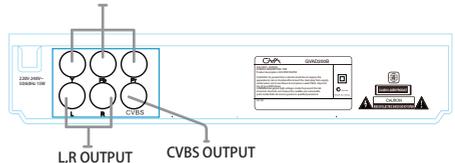

## USB Function

Supported file formats for playback from connected USB device (not included): mpg, mp4, mp3, wma, dat, jpeg  
Maximum capacity: 32GB

# Remote Control

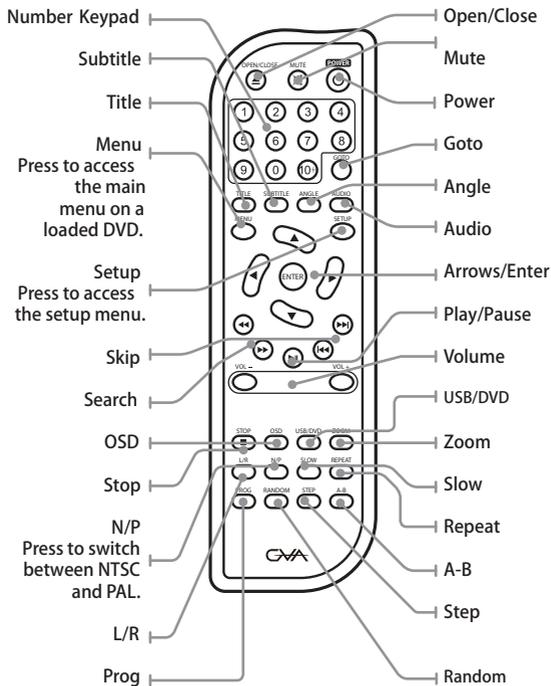

## DVD and CD

### Loading a Disc

1. Press the **Open/Close** button to open the Disc Drawer.
2. Load a disc into the DVD player, label side facing up.
3. Press the **Open/Close** button to close the Disc Drawer.
4. After a disc is loaded, it will begin playing automatically.

### Playing a Loaded Disc

1. Follow the instructions for Loading a Disc.
2. If the disc does not begin playing automatically, press the **Play/Pause** button.

### Programming a Loaded Disc

1. Follow the instructions for **Loading a Disc** and **Playing a Loaded Disc**.
2. While the loaded disc is playing, press the **PROG** button on the remote.
3. Use the **Arrows/Enter/Number** Keypad buttons to highlight and select a DVD title and chapter, or CD track.
4. Highlight the **PLAY** button to play.
5. DVD Titles and chapters or CD tracks will play in the order they are programmed.
6. Repeat step 3 until the desired DVD titles and chapters or CD tracks are programmed.

### Playing a JPEG CD

1. Load a JPEG photo disc into the player by following the instructions for Loading a Disc.
2. A slide show of JPEG photos from the CD will begin playing automatically.
3. Press the **Stop** button to access a file view of the loaded JPEG disc.
4. Use the **Arrows/Enter** buttons on the remote to select and view photos.

### Access the DVD Setup Menu

Press the **Stop** button on the remote twice. In order to access all of the features of the DVD setup menu, the DVD player needs to be fully stopped.

## Connecting Video and Audio

Note: Before making or changing any connections, make sure that all the devices are disconnected from the power outlet.


The video cable connection can be made using either the CVBS output (good) or the Y,Pb,Pr outputs (better), depending on the available inputs on your TV.

The audio cable connection must be made from the DVD player's L/R audio outputs to the corresponding inputs on your TV (or amplifier).

See below for connection details:

### RCA Stereo Audio Output

1. Use the **RCA Stereo Audio Output** send audio from the DVD player to a television.
2. Requires an RCA audio cable (included).
3. Use the RCA audio cable to connect the **RCA Stereo Audio Output** to an RCA stereo audio input on a television.
4. Adjust the connected television's input setting to match the input used in the previous step.

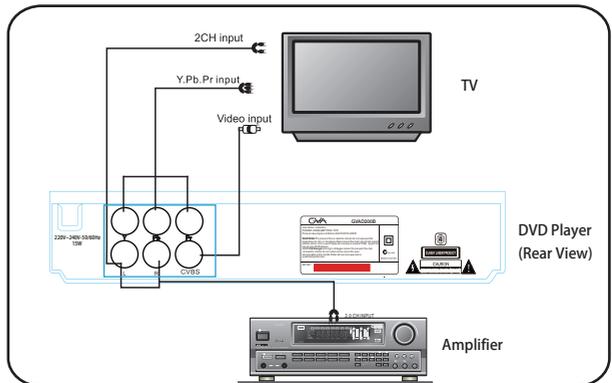

## Press the **Setup** button on the remote.

### Technical Specification

Type	GVAD200B
Play mode	PAL/NTSC
Disc mode	DVD, VCD, CD, MP3, JPEG
Resolution	≥ 500 lines
Audio characteristic	
Frequency response	20Hz-20KHz: +/-1dB
Audio S/N ratio	≥ 90dB
Dynamic range	≥ 90dB
Distortion	< 0.01%
D/A converter	192KHz/24bit
Output characteristic	1Vp-p(75 Ω)
Audio output	2.0V ± 0.0V 1Vp-p(75 Ω)
AC-3	2 channel output
Power Voltage	220V-240V-50/60Hz
Power consumption	15W
Size	225x38x210mm

Specifications are subject to change without notice.

## WARRANTY INFORMATION

Thank you for your purchase.

This product is warranted against defects in materials and manufacture for a period of 12 months from the date of original purchase in Australia or New Zealand, provided that it is used in accordance with the provided instructions and the defect is not a result of misuse, neglect, accident, alteration or improper installation.

### Please note:

- Proof of purchase is required to establish date and location of purchase, for warranty purposes. We recommend that you retain your receipt as proof of purchase.
- As GVA does not undertake that repair facilities and parts will be available for the product, the decision to repair, replace or refund the product will be at the sole option of GVA or its Authorised Service Centres.
- The product will be at the **owner's** risk whilst in transit to or from GVA or its Authorised Service Centres.
- GVA and its Authorised Service Centres may charge you for labour, parts, transportation and handling costs for work done when the product is found to be in working order.
- Where postage/delivery of the item is deemed necessary, the owner will bear the expense of transporting the item to GVA or its Authorised Service Centre; return freight will be covered by GVA or its Authorised Service Centre.

## STATUTORY WARRANTY INFORMATION

This warranty is given by Yale Prima and relates to products used for domestic purposes only. The benefits conferred by this warranty are in addition to and do not restrict, limit or modify any other conditions, warranties, guarantees, rights or remedies expressed or implied by the Competition and Consumer Act 2010 (Australia) or the Consumer Guarantees Act 1993 (New Zealand) or any other relevant consumer protection legislation in Australia or New Zealand.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.