

411L UPRIGHT FREEZER

/ GVAHS-502FWE



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY


GVA

THE 'V' STANDS
FOR VALUE.

Contents

Guide to the Appliance	2
Caring for the Environment	3
Safety Information and Warnings	4
Basic Set Up	6
Basic Features	8
Installing the Door Handle	10
Installing the Decorative Cover	11
Hints and Tips	12
Troubleshooting	13
Care and Maintenance	14
Technical Specifications	16

Guide to the Appliance

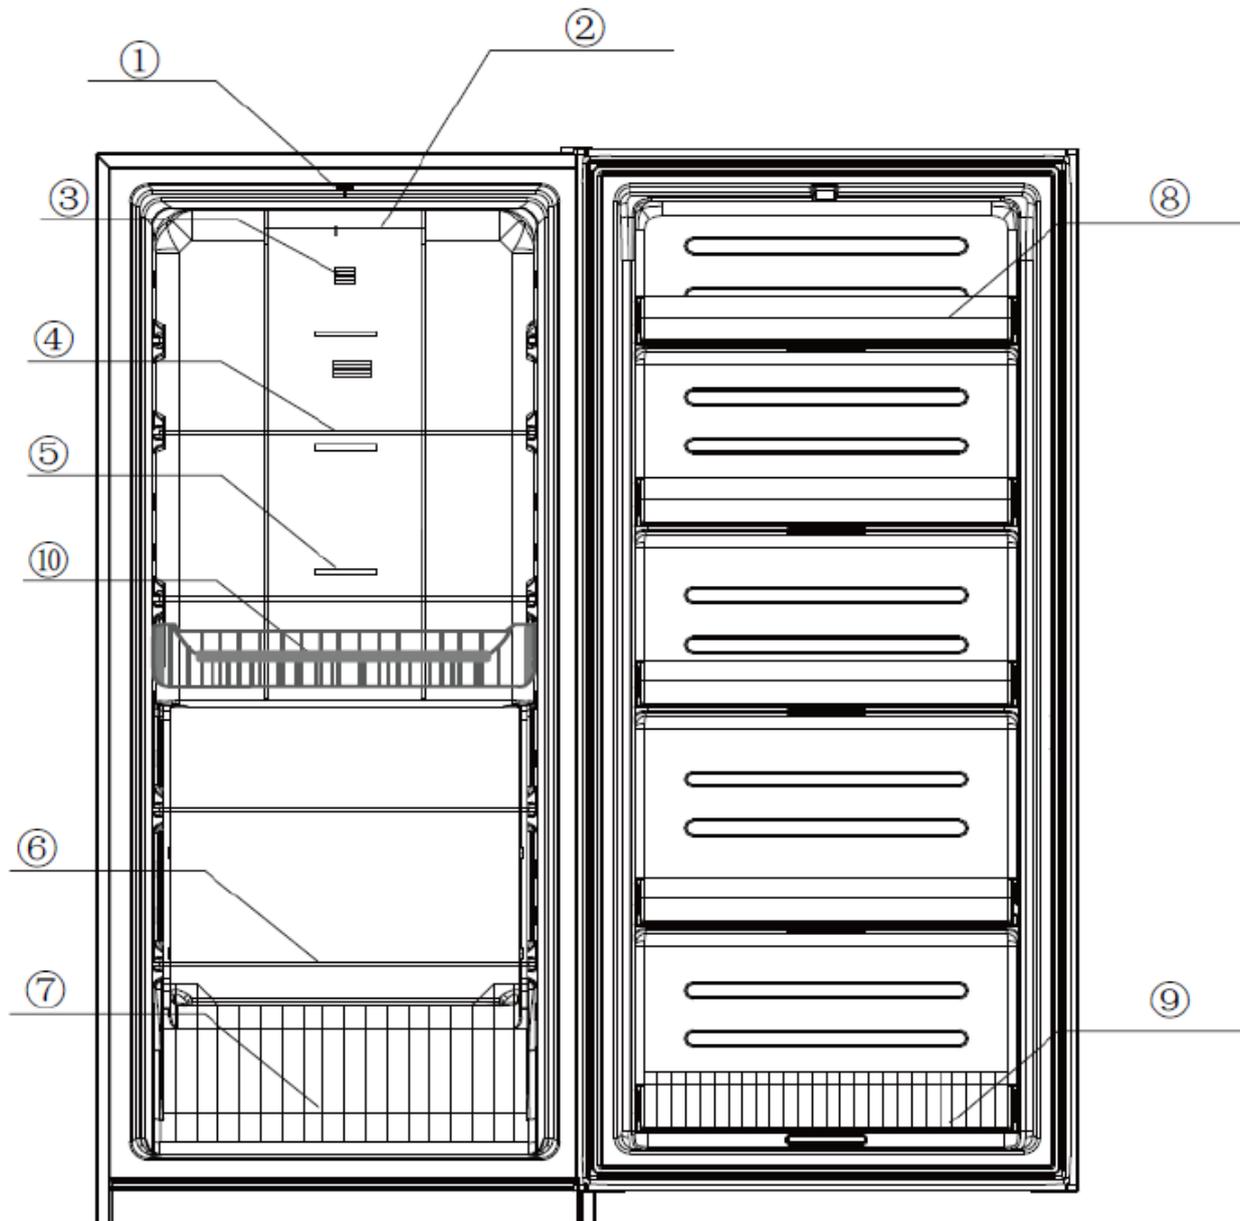

1. Light switch
2. Light cover
3. Temperature sensor gap
4. Wire freezer shelf
5. Outlet airflow gap
6. Inlet airflow gap
7. Wire drawer
8. Door tray
9. Wire door tray
10. Wire drawer

Note: Due to production improvements, the appliance may differ slightly from the diagram shown. Diagrams in this instruction manual are ready for reference only.

Caring for the Environment

Responsible disposal of the packaging

The packaging of your appliance has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly.

Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please ensure they are offered for recycling rather than throwing these materials away.

Responsible disposal of the appliance

At the end of its working life, do not throw this appliance out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recovered and used again.

Electrical and electronic appliances contain materials and substances which, if handled or disposed of incorrectly, could be potentially hazardous on the environment and human health.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling and recovery of the refrigerant. This appliance contains the flammable refrigerant isobutane (R134a) and cyclopentane (R141b) in the cabinet insulation, and must be disposed of in a separate waste collection. Contact your local authorities for advice on recycling facilities in your area.

Take care not to damage the pipework at the back of the appliance before or during transportation so that the refrigerant gas cannot escape.

The plug must be rendered useless and the cable cut off directly behind the appliance or the machine to prevent misuse.

DANGER. Risk of child entrapment: When discarding a fridge or freezer, make sure to take off the door and the spring action or bolt catch. Leave the shelves in place so that children cannot easily climb in, get trapped inside and suffocate.

Safety Information and Warnings

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.

WARNING Do not use mechanical devices or other means to accelerate the defrosting process other than those recommended by the manufacturer.

WARNING Do not damage the refrigerant circuit.

WARNING Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

WARNING Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

This appliance is intended to be used in the household and similar applications such as staff kitchen areas, offices and other working environments, in shops, farm houses and by clients in hotels, motels and other residential type environments, bed and breakfast type environments, catering and similar non-retail applications.

Energy Saving Tips

The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts and out of direct sunlight.

Allow hot food to cool to room temperature before placing it in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality or spoil.

Be sure to wrap foods properly and wipe containers dry before placing them in the appliance, this will cut down on frost build-up inside the appliance.

The storage bin should not be lined with aluminium foil, wax paper, or paper towelling. Liners interfere with cold air circulation, making the appliance less efficient.

Organise and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

Safety Information and Warnings

Safety Tips

Please always follow the safety tips listed below.

The power supply for the appliance should be exactly the same as described on the data sheet, please use the standard tri-prong socket.

Do not operate the appliance in the presence of flammable or explosive fumes. It is prohibited to put flammable, acid or volatile goods in the cabinet.

Please unplug the freezer first when you replace the light bulb or repair the freezer. Please unplug the appliance immediately if you find any abnormal smell or smoke and contact your local service centre.

Please do not allow water on the cabinet or put a vessel full of water on the freezer. If the freezer is wet the electrical insulation capability may be weakened.

Hanging or sitting on the door is very dangerous, it may overturn the unit and subvert the goods in (or on) the freezer.

Do not use an extension lead with this appliance.

Basic Set Up

Before using the freezer remove all packing, including bottom cushion, foam pads and rubber belts in the freezer.

Clean the outside and inside of the freezer with a warm wet rag (a little detergent can be added into the warm water. Lastly, clean the freezer with fresh water).

Locate the freezer close to a power point.

To prevent damage to the power cord and any consequent incidents, the power cord should not be covered by the freezer or other objects.

Location


The appliance should be placed in a well-ventilated and dry environment. Do not put the freezer in direct sunlight and keep it as far as possible from heat sources.

Do not place in damp or wet areas to prevent rusting and weakening of insulation.

The appliance should be placed on a flat and solid floor. Ensure the appliance is level by adjusting the front leg levellers.

Install this appliance in an area where the ambient temperature is between 0°C and 43°C. If the temperature around the appliance is too low or high the cooling ability may be affected.

There should be enough space around the freezer to allow proper ventilation of heat emission and for the door to open easily. Allow at least 10cm between the back and sides of the freezer to the surrounding walls and a 30cm clearance at the top of the freezer.

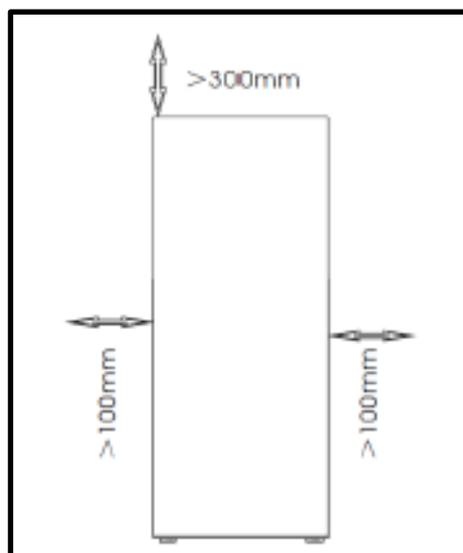

Basic Set Up

Cleaning Before Use

Wipe the inside of the appliance with a weak solution of bicarbonate soda. Then rinse with warm water using a 'wrung-out' sponge or cloth. Wash the shelves and salad bin in warm soapy water and dry completely. Clean the exterior of the appliance with a damp cloth.

Before Using Your Appliance

Do not damage the power cord under any condition so as to ensure safe use, do not use when the power cord is damaged or the plug is worn. Do not put flammable, explosive, volatile and highly corrosive items in the freezer to prevent damages to the product or fire accidents. Do not place flammable items near the freezer to avoid fires.

Do not place items such as bottled or sealed containers of fluid such as beverages in the freezer to prevent bursts and other losses. Before placing any food in your appliance, turn it on and wait for 24 hours, to make sure it is working properly and to allow it time to fall to the correct temperature. The appliance should not be overfilled.

Before Plugging in the Appliance

You must check that you have a socket which is compatible with the plug supplied with the appliance.

Before Turning on the Appliance


Do not turn on until two hours after moving the appliance.

Noise Inside the Appliance

You may notice that your appliance makes some unusual noises. Most of these are perfectly normal, but you should be aware of them.

These noises are caused by the circulation of the refrigerant liquid in the cooling system. It has become more pronounced since the introduction of CFC free gases. This is not a fault and will not affect the performance of your appliance. This is the compressor motor working, as it pumps the refrigerant around the system.

Basic Features

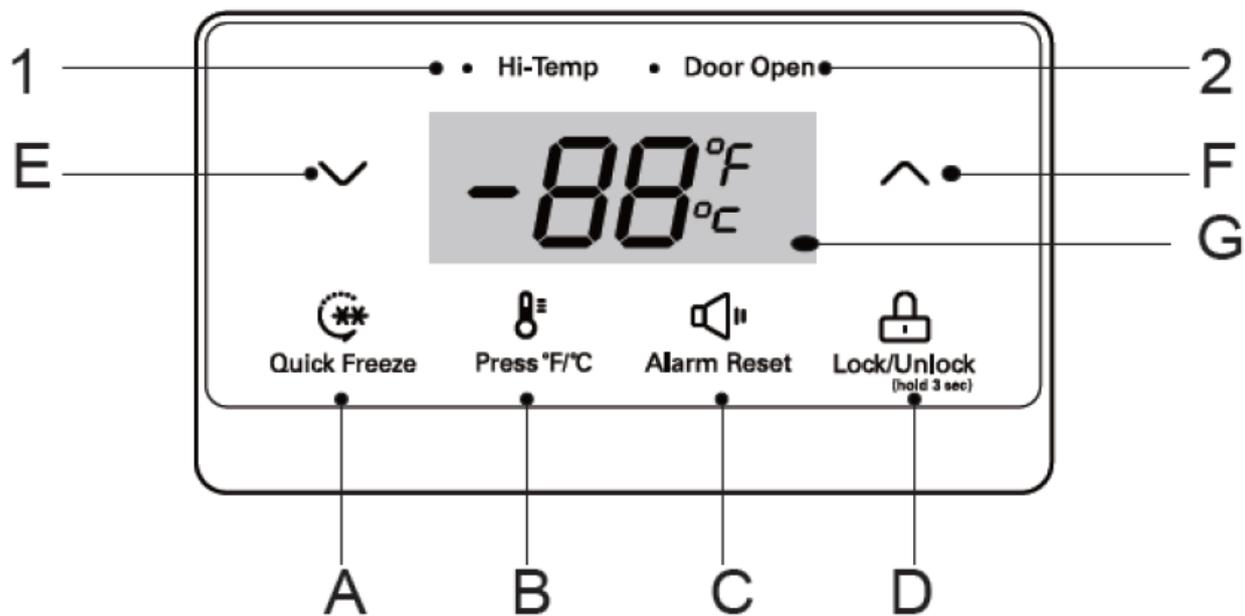

Alarm

1. High Temp (high temperature alarm)
2. Door Open (when the door is open for longer than 60 seconds)

Buttons

- A. Quick Freeze button
- B. °C or °F temperature switch
- C. Alarm reset button
- D. Lock/Unlock button
- E. Temperature setting/ Quick Freeze time setting (∨) down
- F. Temperature setting/ Quick Freeze time setting (^) up
- G. Temperature display

Functions

Freezer temperature setting.

The temperature of the freezer ranges from -22°C to -14°C. Press the ∨ (icon E) or ^ (icon F) buttons to set the freezer temperature. The temperature display (icon G) will flicker as the temperature is adjusted, after 10 seconds exit the temperature setting function and the new temperature will be set. To lock the selected temperature, press the Lock/Unlock (icon D) button.

Basic Features

Quick Freeze Function

Press the Quick Freeze button (icon A) to enter Quick Freeze mode. The temperature (icon G) will display 24°C, Quick Freeze time takes 6 hours. To exit Quick Freeze mode press the Quick Freeze button (icon A).

Press the Quick Freeze button (icon A) for 3 seconds to enter state of Quick Freeze. The Quick Freeze time (icon G) will flicker; press the ∨ (icon E) or ∧ (icon F) buttons to adjust the time, either 6 or 48 hours (6 hours is the recommended setting). After 10 seconds the Quick Freeze function will take effect, to lock the setting press the Lock/Unlock (icon D) button or press Quick Freeze button (icon A) to exit the setting.

Temperature °C or °F Mode

Press °C/°F button (icon B) to change the temperature display from °C to °F

Alarm Cancel

To cancel the high temperature alarm press the Alarm Reset button (icon C).

Lock/Unlock

To prevent any changes and lock all buttons (except the Lock/Unlock button) hold the Lock/Unlock button (icon D) for 3 seconds, press the button again to unlock all other buttons. When setting the temperature and Quick Freeze time press the Lock/Unlock button to exit setting effect.

Error Codes

Fault Content	Fault Code	Visible Code
Freezer temperature sensor failure.	E2	Yes
Freezer defrosting sensor failure.	E5	Yes
Communication failure.	E6	Yes
Ambient temperature sensor failure.	E7	Yes
Freezer high temperature.	E9	Yes

If any of the above faults appear contact GVA after-sales customer care.


Once the appliance has been set up make sure it has been placed properly and all instructions have been followed.

Once installed open the freezer compartment door after 30 minutes and check the air is cold, if the air is cold set the freezer to the desired temperature.

Installing the Door Handle



Note: Figures in this user manual are for reference only. The actual product may differ slightly. The freezer must be disconnected from the source of electrical supply before attempting the installation of accessories.

1. Remove screws and wrench from the plastic bag.
2. Take out two screws and install them into the door holes, turn the screws until tight.
3. Aim at screws to install the handle
4. The screws in the hole at the side of the handle and turn the screws till they are very tight.

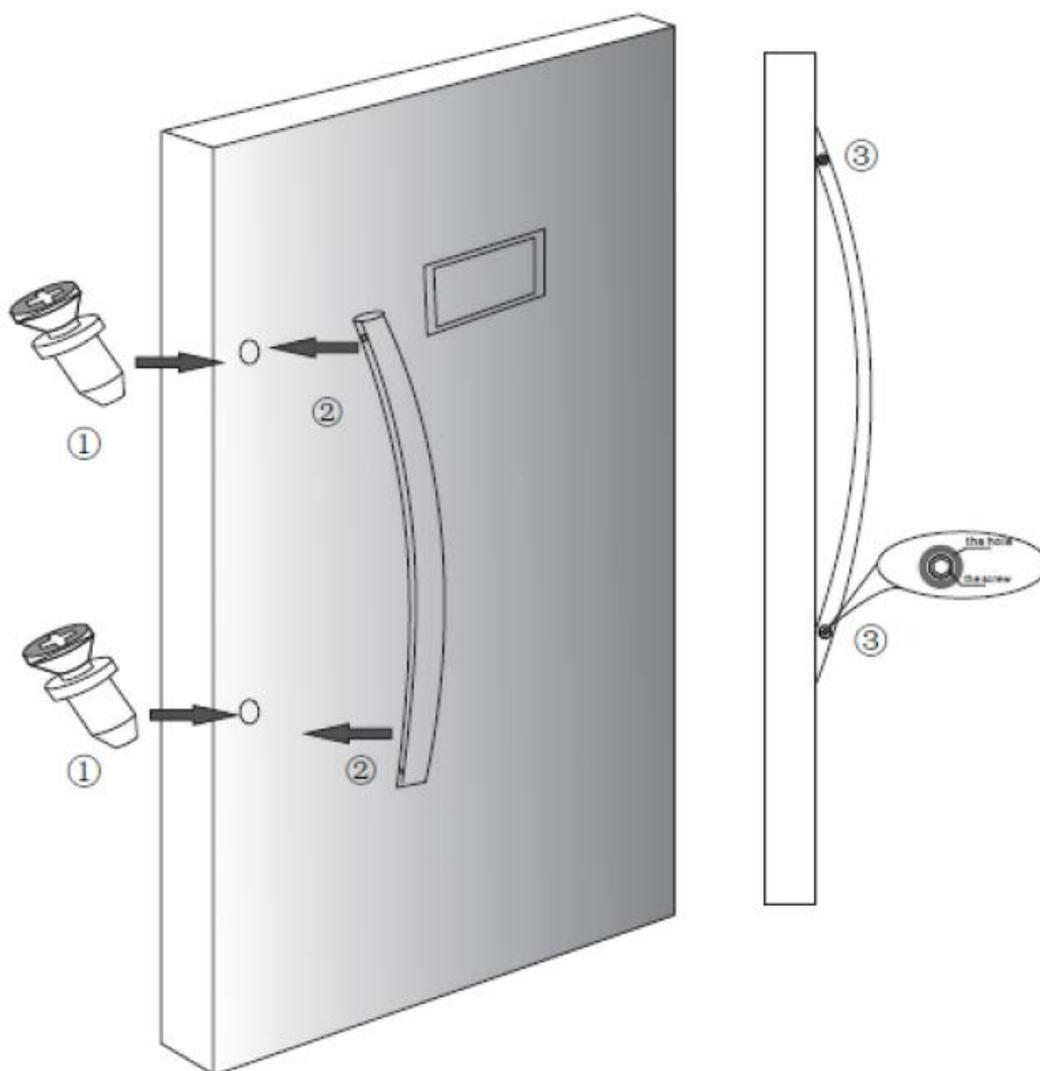


Installing the Decorative Cover

The bottom decorative cover is inside the freezer and three set screws are located in the bag of the Instruction Manual. To install the decorative cover onto the bottom beam of the fridge please refer to the below diagram.

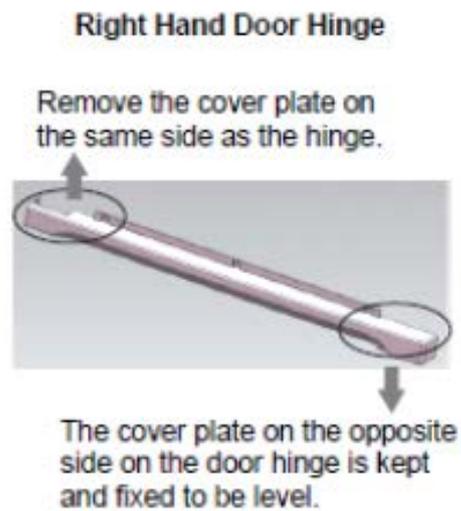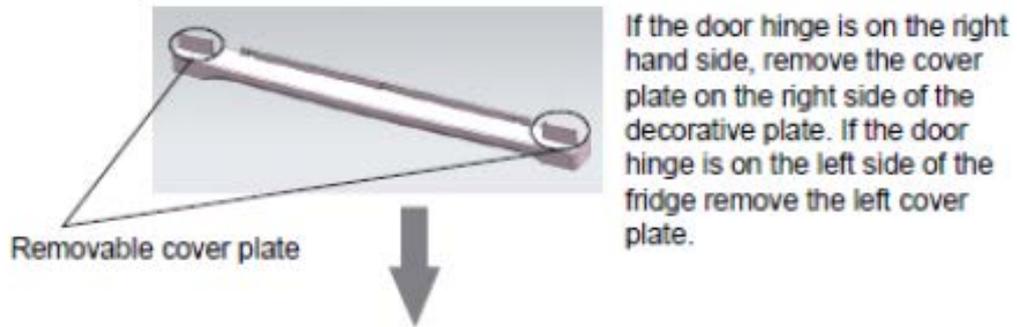

Install the bottom decorative cover using screw as per the below pictures.

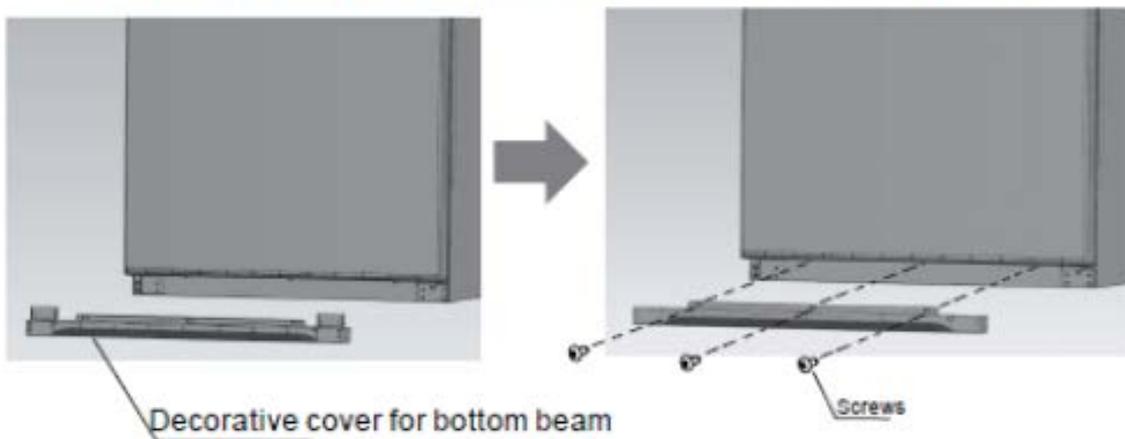

Hints and Tips

When storing foods for a long period it is recommended the freezer is set a temperature of -18°C or below.

Hot food should be cooled to room temperature before it is placed in the freezer.

It is not recommended to store glass containers with liquid in the freezer as the glass may break.

To minimise the amount of time the freezer door is open and to save energy, label containers and store similar foods together.

Do not place food too close to the airflow outlet or inlet and leave space between containers to allow cold air to circulate.

Troubleshooting

Before contacting GVA after-sales support, please check the below.

Problem	Possible Cause	Solution
Freezer does not work.	No power to the appliance.	Check connection of the power cord to the power source.
	Power cord is unplugged.	Plug in the appliance.
	Wrong voltage is being used.	Use correct voltage.
Freezer runs continuously.	Temperature set too low.	Lower temperature control.
	Door is not closed.	Close door securely.
	Hot food placed inside.	Ensure food is at room temperature.
	Door opened too long or too often.	Minimise door opening or duration.
	Door opened too long or too direct sunlight.	Do not place the unit too close to heat source or direct sunlight.
Something blocking inlet or outlet airflow gap.	Check if anything is blocking the airflow.	

Strange Noises

The freezer will produce normal operating sounds, for example a bubbling noise occurs when the refrigerant is pumped through the tubing, this is not a cause for concern.

Moisture

In humid weather moisture may build up around the edges of the door, this can be wiped away with a dry cloth.

Heat


While the appliance is in operation heat will be emitted from both sides, ensure the freezer has proper ventilation and there is nothing blocking the airflow.

Care and Maintenance

Changing the light bulb

Always turn off and unplug the freezer before changing the light bulb.

To change the light bulb unscrew the light cover, remove the old light and replace with a new bulb as shown in the below. Always use a AC220-240V/50Hz/ MAX.40W(E 14). light in this freezer.

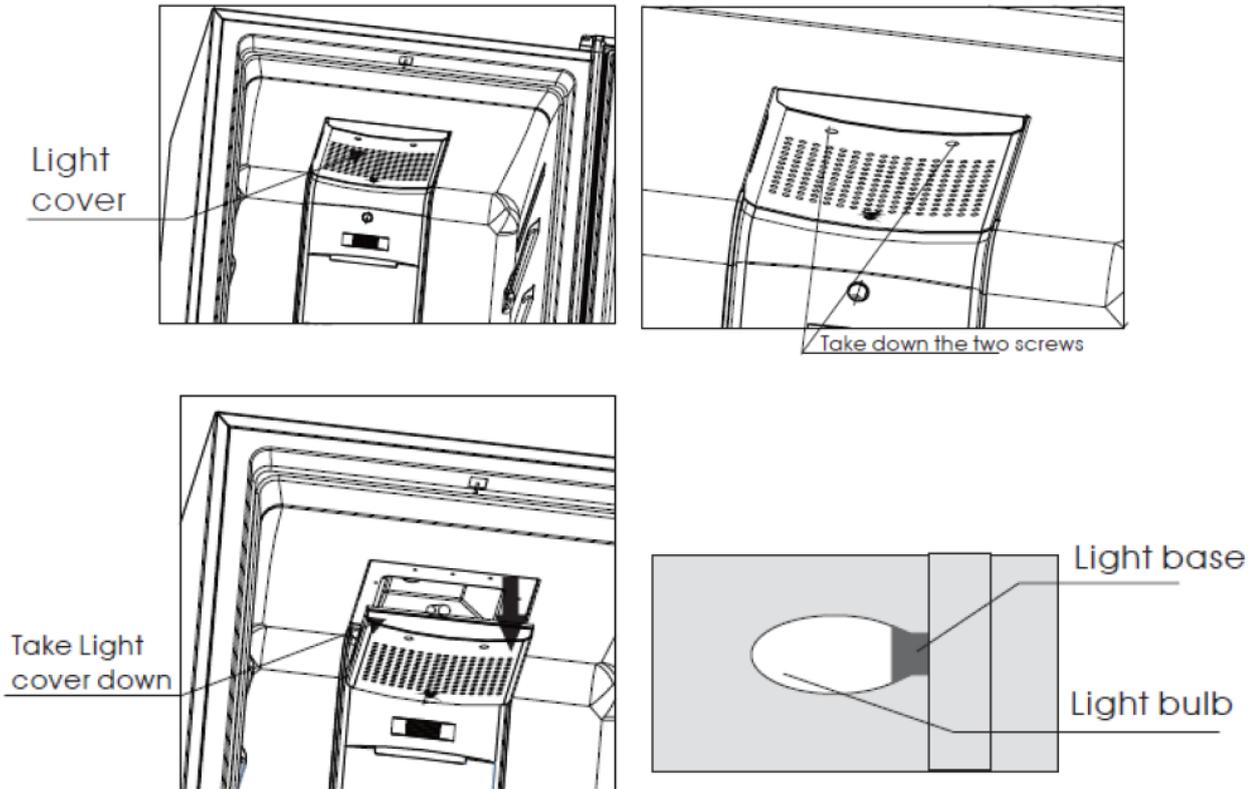

Cleaning

Always unplug the freezer before cleaning.

The appliance should be cleaned frequently both inside and outside using water and a little neutral detergent. Never use boiling water, harsh cleaning agents, acid, alkali or benzene to clean the appliance.

Turning the Freezer off

If the freezer will not be used for a long period of time, remove all food and unplug the freezer and thoroughly clean and dry. To avoid any odours developing leave the door open and place in a well-ventilated area.

Care and Maintenance

Transporting


When moving your freezer do not invert, place horizontally or bump the appliance. Ensure the freezer stays secure in an upright position; do not tilt it for more than 45° from upright.

Do not apply force or pressure to any external part of the appliance.

Allow the freezer to stand for at least 6 hours before turning it on. Do not turn the freezer on immediately after moving.

Technical Specifications

VOLTAGE	220-240V
FREQUENCY	50Hz
CLIMATE CLASS	T
RATED CURRENT	1.4A
LAMP RATED POWER	MAX 40W
DEFROSTER POWER	180W
REFRIGERANT	R134a,115g
TYPE OF PREVENTING FROM ELECTRIC SHOCK	I
WEIGHT	69kg
DIMENSIONS	W711xD750xH1550
CFC Free	

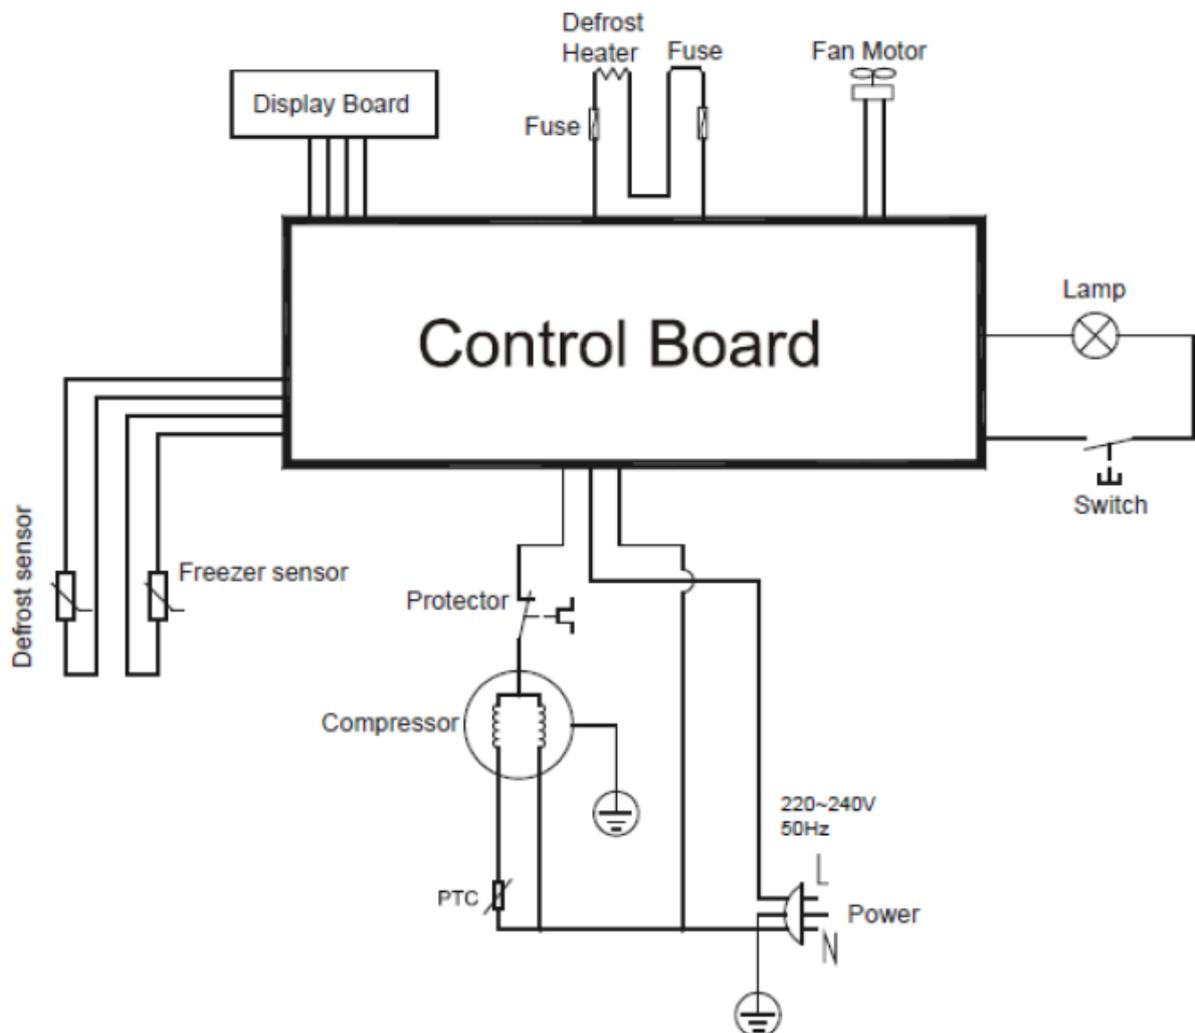



**THE 'V' STANDS
FOR VALUE.**

M.E.W. (Australia) Pty Ltd

15 Vaughan St

Essendon Fields VIC 3041

ACN 152 719 036

1300 725 885

customercare@gvaproductions.com.au

gvaproducts.com.au

While every effort has been made in the preparation of this instruction manual, the publishers cannot be held responsible for the accuracy of the information contained herein or any consequences arising from it.