

7 Fin Oil Filled Heater

/ GVAOR7F



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

THE 'V' STANDS
FOR VALUE.

Contents

Important Safety Instructions	3
Parts List	5
Getting Started	6
Operations	8
Care and Maintenance	10
Responsible Disposal	11

Important Safety Instructions

Read this manual thoroughly before first use, even if you are familiar with this type of product. **The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.**

Keep the manual in a safe place for future reference, along with the warranty card, purchase receipt and carton.

Electrical safety and cord handling

- Connect the appliance to a single-phase AC supply of the voltage specified on the rating plate; the socket must stand a minimum 10A load, use a safe socket with an earthed connection.
- Always plug this heater into a separate power point. Do not use it with an extension cord as this may overheat and cause a risk of fire.
- Do not place the heater immediately below an electrical outlet.
- To ensure you do not overload the electrical circuit, make sure that no other appliance is in use on the same electrical circuit as the heater.
- Protect the heater from moisture. Never touch the heater with wet or damp hands or feet. Never expose it to water (including rain) or other liquids. Never use the heater in the immediate surroundings of a bath, shower or swimming pool, or anywhere it may fall into a bathtub or any other water container.
- Always place the heater in an upright position and on a stable surface.
- Do not operate the heater with a damaged cord or plug, or after the heater malfunctions, has been dropped, or damaged in any manner.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. In case of damage, contact the after sales support line for advice on return or repair.
- **Protect the power cord.** Do not put it on top of the heater, or expose it to hot surfaces. Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break.
- Do not run the cord under carpeting or cover it with throw rugs, runners etc. Arrange the cord away from traffic areas and where it will not be tripped over.
- Never leave the heater unattended while it is in use. Always switch it off and unplug it from the power point when not in use and before moving it.
- To disconnect the heater, turn it off and then remove the plug from the electrical outlet. Grip the plug when disconnecting, do not pull on the cord.

Important Safety Instructions (Cont.)

Usage conditions and restrictions

- This product is intended for indoor, non-commercial, non-industrial, household use only. Do not use it outdoors.
- Do not use the product for anything other than its intended purpose, and only use it as described in this manual. Any other use is not recommended and may cause fire, electric shock or injury to persons.
- Do not use the heater to dry or heat clothing, shoes or any other item.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Supervise young children to ensure they do not play with the heater. Close supervision is necessary when any appliance is used by or near children.
- Do not use the heater in a room with a floor area of less than 5m².
- To avoid any risk of fire, do not place this heater near flammable materials, surfaces or substances and keep such materials at least 1 m from the front of the heater and away from its sides and back.
- Do not use the heater in any areas where petrol, paint or other flammable liquids are stored, such as in a garage or workshop.
- Use this heater in a well ventilated area.
- Use the heater on flat, dry surfaces only. Do not use it on soft surfaces such as bedding or soft carpeting, where openings may become blocked.
- Do not insert or allow objects to enter any openings. To prevent a possible fire, do not block air intakes or exhaust openings in any manner.
- In order to avoid overheating, do not cover the heater.
- **CAUTION: HOT!** This heater is hot when in use. To avoid burns and personal injury, do not allow bare skin to touch hot surfaces. Only use the handles when moving the heater during use.
- Contact the after sales support line if your heater is not working properly or if there is an oil leakage. Repairs requiring opening of the oil container are only to be made by the manufacturer or its service agent.
- **NOTE:** Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.

Parts List



1. Handle
2. Indicator Light
3. Thermostat control
4. Power settings
5. Oil filled fins
6. Power cord storage
7. Castor wheels
8. Power Cord

Getting Started

Before First Use

- Thank you for purchasing our oil filled heater. Each unit has been manufactured to ensure safety and reliability. Please read the instructions carefully and keep them for future reference.
- Unpack the appliance but keep all packaging materials until you have made sure your new heater is undamaged and in good working order. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach.
- Inspect the power cord and plug for damage. Do not use the heater if the appliance or its cord have been damaged or are not working properly. In such case, contact the after sales support line for advice.

Assembly

The heater is packaged with the feet (castor wheels) unattached. You must attach them before using or turning on the heater.

1. Remove the heater and all accessories from carton.
2. Place the heater body upside down on a scratch-free surface, make sure it is stable and will not fall.
3. Screw off the wing nuts from the U-shaped bolt provided. Attach the U-shaped bolt to the U-facing flange between the first and second fins (near the front cover).



4. To attach the castor mounting plate to the heater body, you should insert the threaded ends of the U-shaped bolt in the holes on the castor mounting place.

Getting Started (Cont.)



5. Screw the wing nuts back to the U-shaped bolt and fasten the wing nut properly.

NOTE: Do not over tighten, which may cause damage to the heater flange.



6. Screw off spherical nut from the castor, align the shaft to the hole of the castor mounting plate, insert in and screw on the spherical nut.
7. Repeat step 3, 4, 5, 6 on the rear of heater fins for mounting the rear castors.

NOTE: The rear castors must be mounted between the end two fins.



Operations

Using The Heater

NOTE: The heater is packaged with castor wheels unattached. You must attach them before using the heater, see opposite for instructions.

1. Choosing a safe location

- Always place the heater on a flat and stable surface. Using it on an uneven or sloping surface may cause damage to the heater.
- Make sure you have read all safety instructions on pages 3 to 4, which will help you choose a safe location for your new heater.

2. Switching on

- Set the power setting knob to the OFF (0) position.
- Set the thermostat knob to LOW (the thin end of the circle).
- Then insert the plug into a well earthed wall socket.

3. Selecting a heat setting

- Rotate the thermostat knob clockwise to HIGH (the thick end of the circle).
- Rotate the heater to desired heat setting:
(0) - OFF; (1) - LOW; (2) - MEDIUM; (3) - HIGH
- The power light indicator will light up.

4. Setting the thermostat

When your room has reached the desired temperature:

- Slowly rotate the thermostat knob counterclockwise until the indicator light goes out. The thermostat can now be left at this setting.
- As soon as the room temperature drops below the set temperature, the unit will switch itself on automatically until the set temperature has been reached again. This way the room temperature remains consistent with the most economical use of electricity.

5. Changing the temperature

If you want to change the room temperature setting:

- Rotate the thermostat knob clockwise to raise the temperature or counterclockwise to lower it.

6. Switching off

Once you have finished using your heater:

- Turn the heat settings knob to the OFF (0) position.
- Turn the thermostat knob to LOW (the thin circle shape).
- Then unplug the heater from the mains supply outlet.

Operations

Safety Features

This heater includes two safety features to prevent an accidental fire should the heater overheat or be tipped over.

- An overheat protection system shuts off the heater when parts of the heater are getting excessively hot.
- A built-in tip over switch shuts off the heater automatically when it is accidentally tipped forward or backward. When the heater returns to the normal upright position, it will resume normal operation.

Care and Maintenance

Care and Maintenance

WARNING!

- Always set all controls to the OFF position, remove the plug from the socket outlet and allow the heater to cool down completely before cleaning it.
- Never immerse the heater in water. Never allow the interior to get wet.
- Do not use any chemical cleaners such as detergents or solvents, or abrasives, on any part of the heater.

1. To clean dust and dirt off the heater, only wipe it with a soft cloth, moistened, if necessary, but not wet.
2. When the heater is not in use, make sure it is unplugged from the wall socket.
3. To store the heater, we recommend removing the castor wheels and packing it in its original carton. Storing it in a cool and dry place, out of children's reach, until later use.
4. In case of a malfunction or if in doubt, do not try to repair the heater yourself, it may result in a fire hazard or an electric shock. Call the after sales support line for advice.

NOTE: Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.

Responsible Disposal

Responsible Disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.