

Stick Mixer

/ GVASW108SS



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA


THE 'V' STANDS
FOR VALUE.

Important Safety Instructions

Store this instruction manual in a safe place, along with your warranty card, purchase receipt and packaging box for future reference. Please pay particular attention to the safety information.

- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not operate the appliance outdoors.
- Power plug must be removed from power socket before cleaning, servicing, maintenance or moving the appliance.
- The appliance should be placed on a flat surface when operating to avoid overturning.
- The appliance should not be operated in a damp place or high humidity (such as the bathroom).
- Do not insert any objects (cutlery, utensils) while the appliance is in operation.
- Handle the blades with care and never remove the lid until the appliance has completely stopped.
- To reduce the risk of electrocution, never operate this product with wet hands, submerge under water or spill liquids into the product.
- Improper installation may result in the risk of fire, electric shock and or injury to persons.
- The unit has no user-serviceable parts contained within. Do not attempt to repair, disassemble or modify the appliance.

Knowing Your Stick Blender

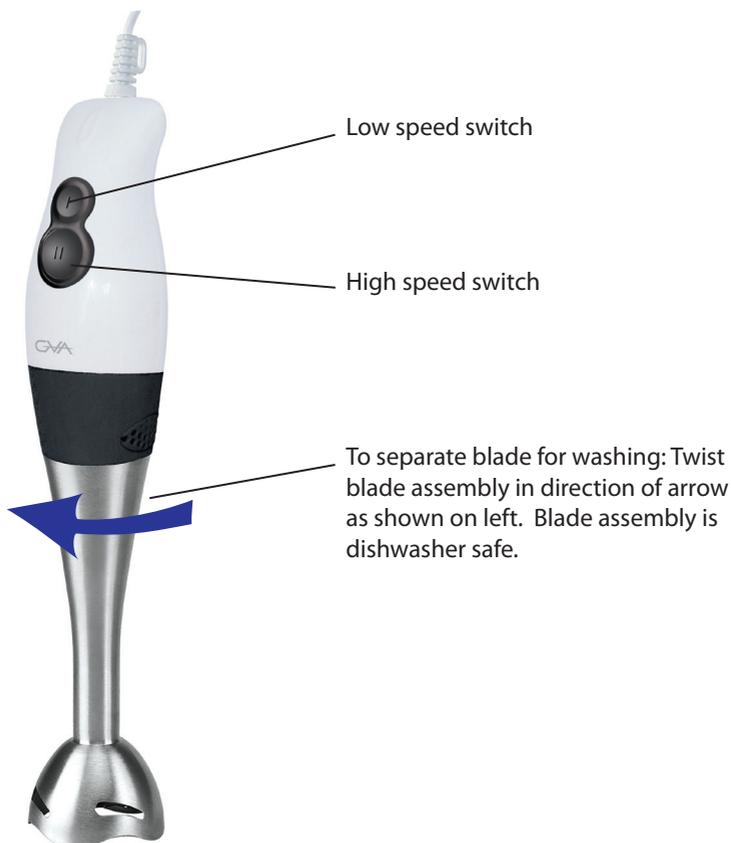

1. Simply plug the blender into power outlet. 240VAC 50Hz
2. Lower the mixer into food and depress the speed switch at the top of the motor unit as indicated.
3. The mixer will only turn on if the low speed switch or high speed switch are depressed.

Care & Cleaning Instructions

The appliance is not designed to be dismantled without special tools. Please do not attempt to separate the motor unit.

Mixer attachments are dishwasher safe.

Cleaning the exterior of the unit should only be attempted with a slightly damp, soapy cloth. After wiping down the unit with the soapy cloth, dry any wet spots with a dry cloth.

Caution: Never immerse the Base (motor unit) in water or other liquid for cleaning.

Notes

Notes
