

2 Slice White Toaster

/ GVAT2



Instruction Manual

12
MONTH

MANUFACTURER'S
WARRANTY

GVA

THE 'V' STANDS
FOR VALUE.

Important Safety Instructions

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

Keep the manual in a safe place for future reference, along with the purchase receipt and carton. If applicable, pass these instructions on to the next owner of the appliance. Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

- Do not place any part of this toaster in water or any other liquid.
- Prior to first use, the toaster should be used for a few minutes without bread in it. There will be some smoke at first; this is entirely normal.
- Do not touch the hot surface.
- Do not use outdoors.
- Keep the toaster out of reach of children.
- Use only pre-sliced bread.
- Do not insert oversized foods, metal foil packages, or metal utensils into the toaster. This may result in electric shock.
- Do not remove food from the toaster while the plunger is down.
- Do not remove the crumb tray while the toaster is plugged in. Disconnect from power supply, wait for it to cool, then remove the crumb tray.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Do not use the toaster near curtains, upholstery or other decorative fabrics, as they can easily catch fire and cause a safety hazard.
- Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials. They must be watched.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is forbidden to be operated by separate timer or separate remote device.
- Warning: The surfaces are liable to get hot during use.

Parts of your Toaster

1. Crumb tray
2. Bread lever
3. Frozen button
4. Reheat button
5. Cancel control
6. Browning control



Operation

- Place your toaster on a flat, dry, stable surface.
- Plug the toaster in, and adjust it to your required toasting time, using the Browning control (6)
- Place bread or other food suitable for toasting into the slot, then press down the bread lever (2);
- It will remain down until the bread is toasted.
- If you wish to stop the toasting process, press the Cancel button (5). this will automatically eject the toast, and cancel the heating elements.
- If the bread sticks in the toaster, unplug it, wait for it to cool, then remove the bread. NEVER USE METAL UTENSILS TO REMOVE THE BREAD.
- After use, wipe away crumbs using a dry cloth.
- Always allow at least 1 minute's cooling time between cycles if toaster is being used more than once at a time.
- If the lead connecting the toaster to the power supply is damaged, it should only be replaced by a qualified service engineer or the toaster manufacturer.
- Always allow at least 1 minute's cooling time between cycles if toaster is being used more than once at a time.
- Must put in the bread when using, the toaster can not be used without bread.
- This toaster is only for home use.

Cleaning

- Unplug from the power outlet (mains).
- Do NOT use coarse or abrasive sponges/cloths or steel wool to clean the toaster.
- Never spray or apply cleaner directly onto or into the toaster – cleaner should be applied to a soft cloth.
- The outside of the toaster should be wiped with a soft, damp cloth, and polished with a soft, dry cloth.
- After cleaning, wait a few minutes for the toaster to dry completely before use.
- Caution: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.